INTT ladder transportation

Cheng-Wei Shih

2021/05/05

Photos of outer box



Content of shipment


- INTT ladder *1
- Ladder transportation box *1
- Files
 - calibration results
 - Manual for taking the ladder out






The method to fix the ladder


 The principle is to fix the ladder by foams. The foams apply some pressure to fix the ladder.

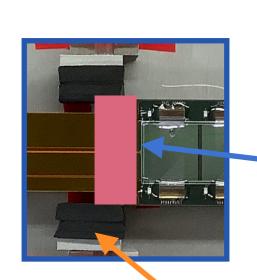

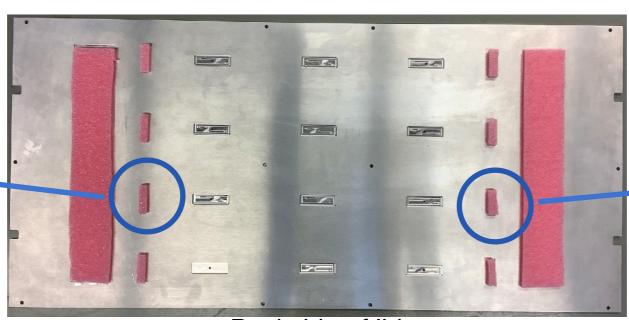


THE WIST

Backside of lid

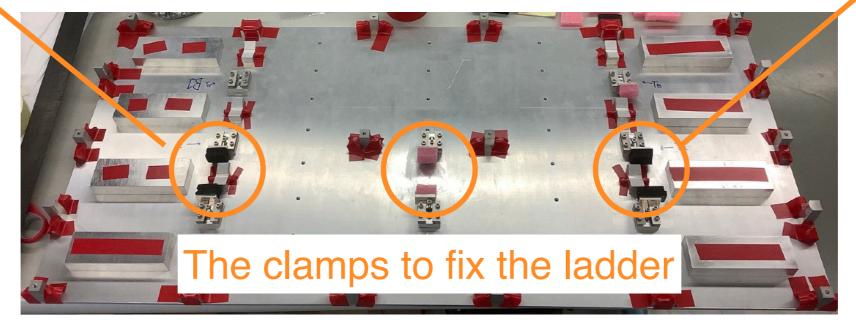


Baseplate


- This is the TOP side of the box
- Please remove the red tapes labeled by number (12 tapes)

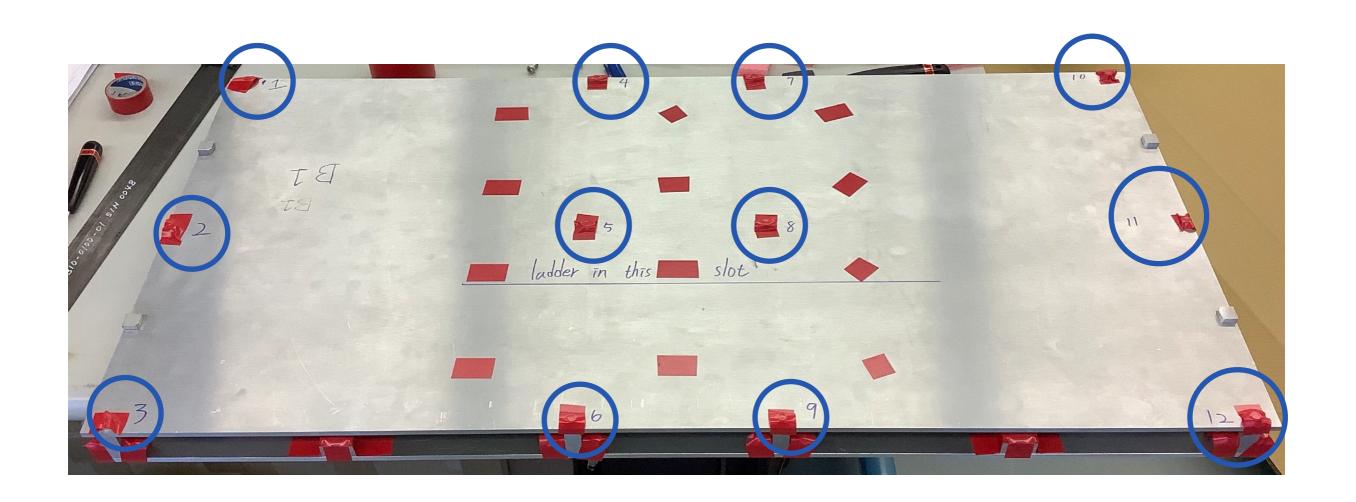


- Please remove the screws labeled by number (12 screws)
- Please lift the lid perpendicularly to remove the lid

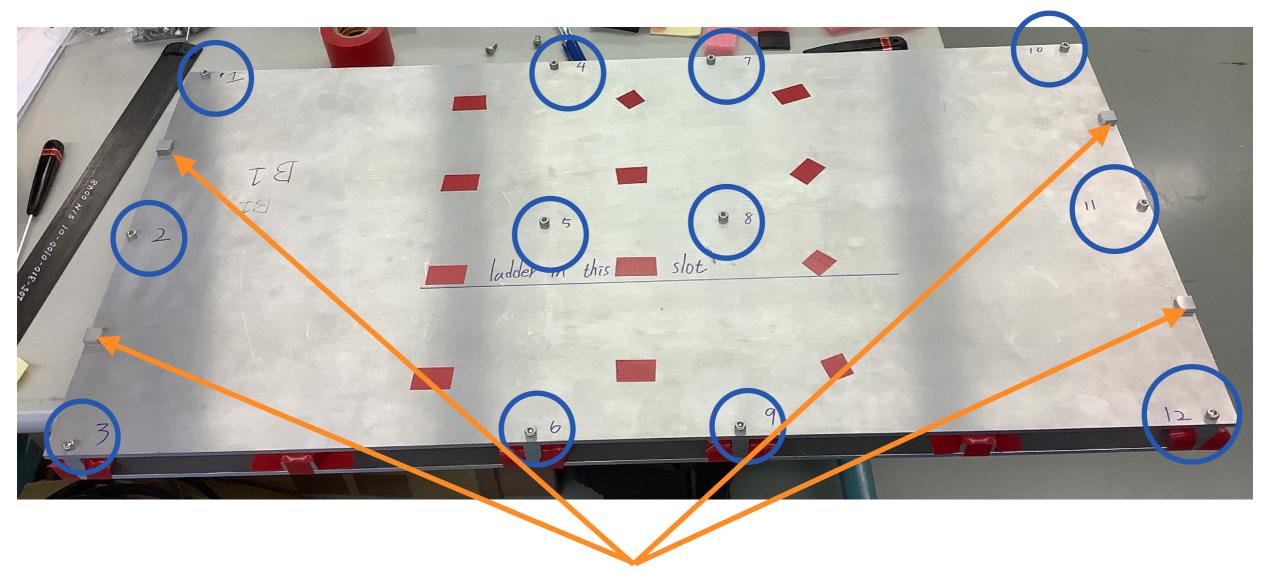


Please remove the tapes labeled with Ta, Tc, Te, Tf, Tg,Th (6 tapes)

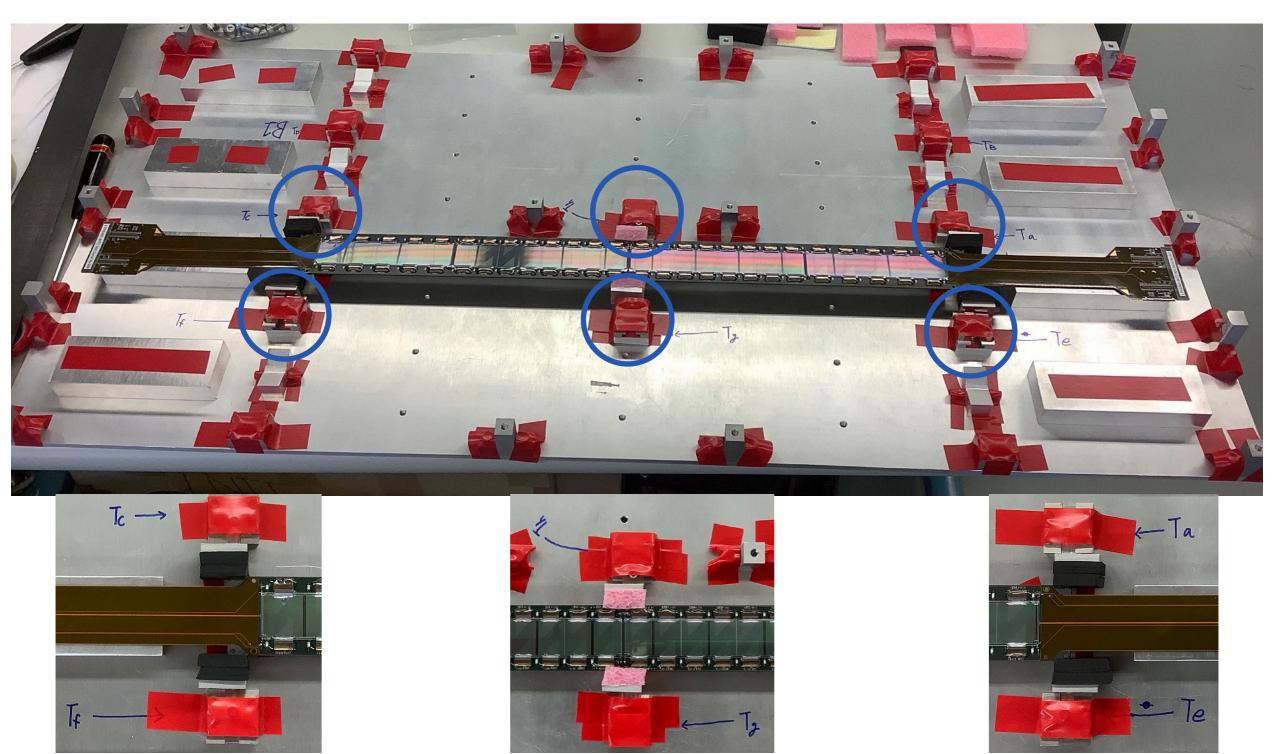

- Please remove the screws labeled with Ta, Tc, Te, Tf, Tg,Th (6 screws)
- Please move the foams backward from ladder

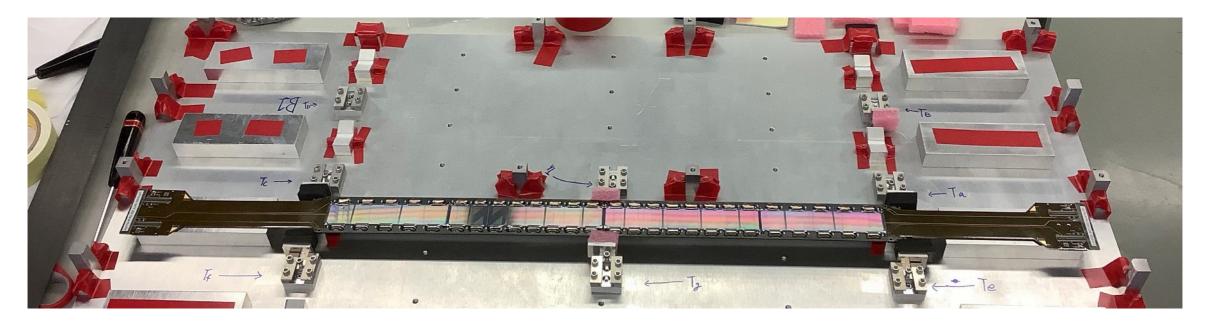

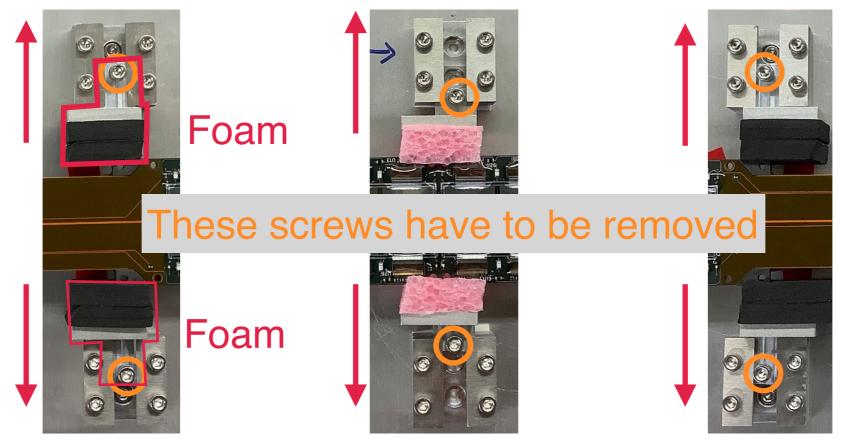

Attention

- The 3-pins adapter is outside the fixture.
- You may need to lift the tail of HDI a little bit when moving the ladder out from box, to avoid the jamming of the adapter and fixture.

