


The R&D of the New Glass scintillator with high density and high light yield



WWW.IHEP.CAS.CN

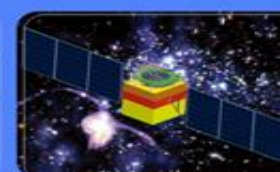

Sen.QIAN

qians@ihep.ac.cn; On Behalf of the GS R&D Group

The Institute of High Energy Physics, CAS

2022. Dec. 1st

Outline

- 1. The Motivation and the Design;
- 2. The Test Facilities for GS;
- 3. The progress of the GS;
- 4. Summary and Next Plan;

1.1. The GS-HCAL of CEPC

Future electron-positron colliders (e.g. CEPC)




- Main physical goals: precision measurements of the Higgs and Z/W bosons
- Challenge: unprecedented **jet energy resolution** $\sim 30\%/\sqrt{E(\text{GeV})}$

CEPC detector: highly granular calorimeter + tracker

- Boson Mass Resolution (BMR) $\sim 4\%$ has been realized in this baseline design
- Further performance goal: **BMR $4\% \rightarrow 3\%$**
- Dominant factors in BMR: charged hadron fragments & HCAL resolution

New Option: Glass Scintillator HCAL (GS-HCAL)


- **Higher density** provides higher energy sampling fraction
- Doping with neutron-sensitive elements: improve **hadronic response (Gd)**
- More **compact HCAL layout** (given 4~5 nuclear interaction lengths in depth)

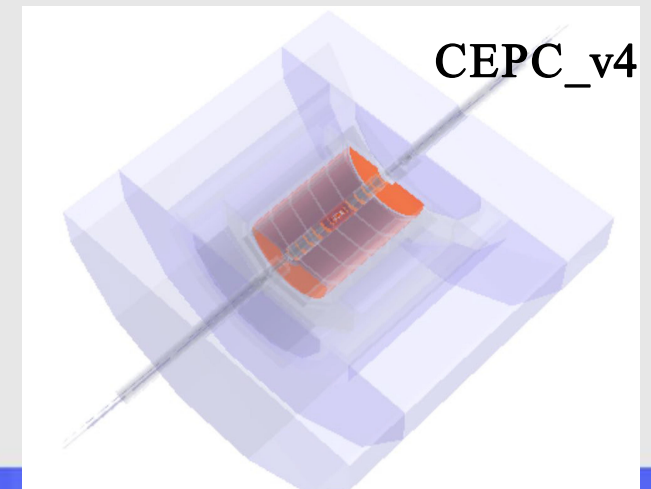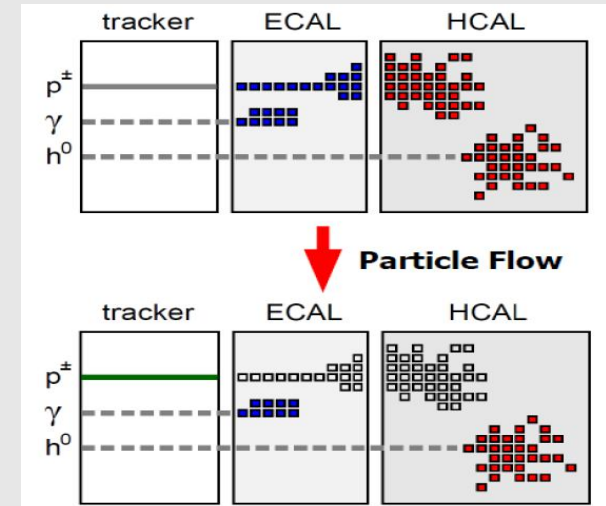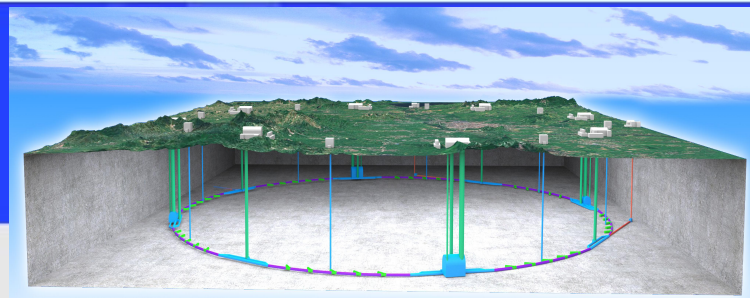

1.2 The Simulation for GS-HCAL


How to achieve the optimized energy resolution (Boson Mass Resolution, BMR)

➤ Impact of Scintillator type

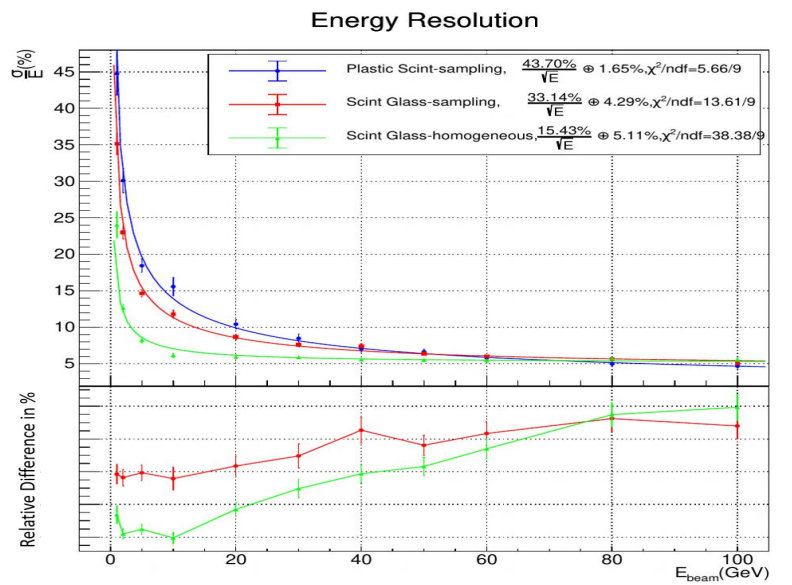


Plastic Scintillator vs Glass Scintillator:
GS has better hadronic energy
resolution in low energy region (<30GeV)

➤ Impact of Light Yield

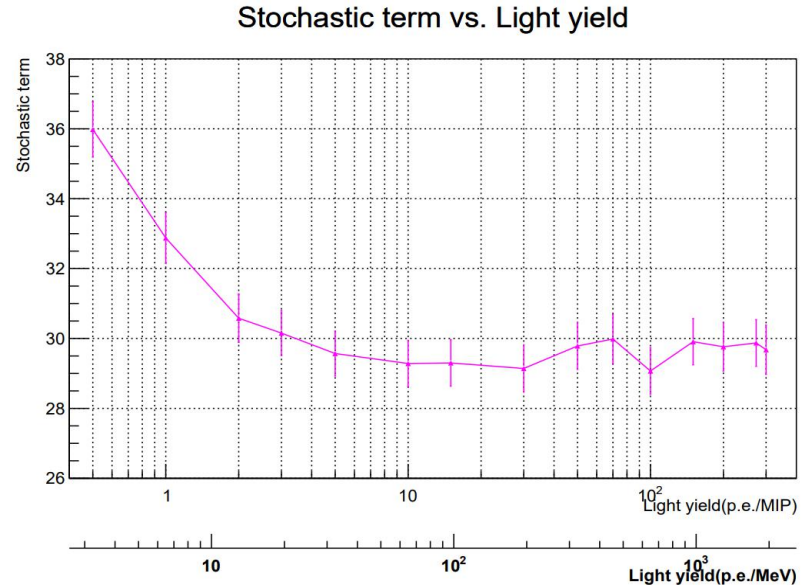

A light yield of 100 p.e./MIP or
1000p.e./MeV seems to be good
enough for better BMR;

➤ Impact of Density

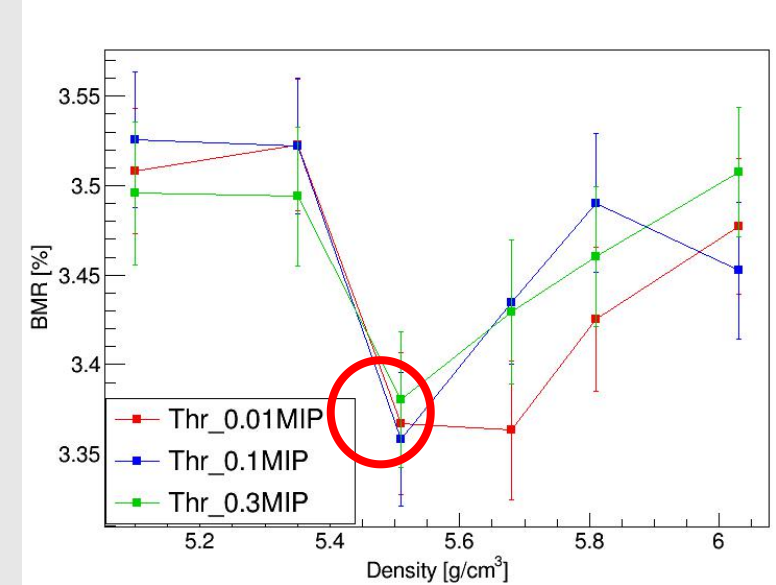


The optimized BRM is almost same
(~3% variation) for glass density from
5-6 g/cm³,

1.3 Target of Glass Scintillator

Key parameters	Value	Remarks
➤ Tile size	$\sim 30 \times 30 \text{ mm}^2$	Reference CALICE-AHCAL, granularity, number of channels
➤ Tile thickness	$\sim 10 \text{ mm}$	Energy resolution, Uniformity and MIP response
➤ Density	$5\text{-}7 \text{ g/cm}^3$	More compact HCAL structure with higher density
➤ Intrinsic light yield	$1000\text{-}2000 \text{ ph/MeV}$	Higher intrinsic LY can tolerate lower transmittance
➤ Transmittance	$\sim 75\%$	
➤ MIP light yield	$\sim 150 \text{ p.e./MIP}$	Needs further optimizations: e.g. SiPM-glass coupling
➤ Energy threshold	$\sim 0.1 \text{ MIP}$	Higher light yield would help to achieve a lower threshold
➤ Scintillation decay time	$\sim 100 \text{ ns}$	Mitigation pile-up effects at CEPC Z-pole (91 GeV)
➤ Emission spectrum	Typically 350-600 nm	To match SiPM PDE and transmittance spectra

1.4. The Design of the Glass Scintillator

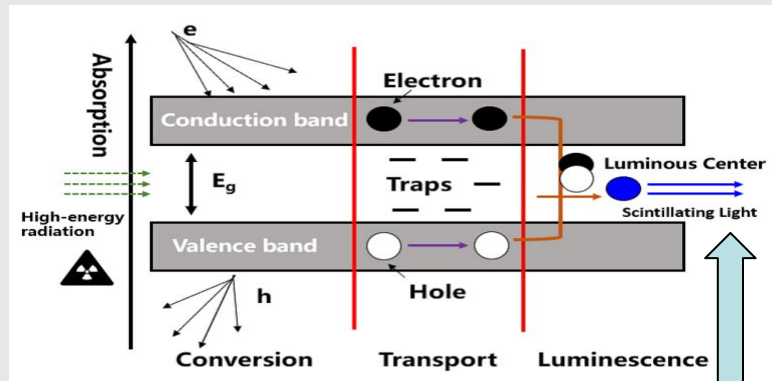


➤ Scintillation mechanism---- **Luminescence Center**

➤ **Conversion**—photoelectric effect and Compton scattering effect;

➤ **Transport**—electrons and holes migrate;


➤ **Luminescence**—captured by the luminescent center ions

Lanthanide elements

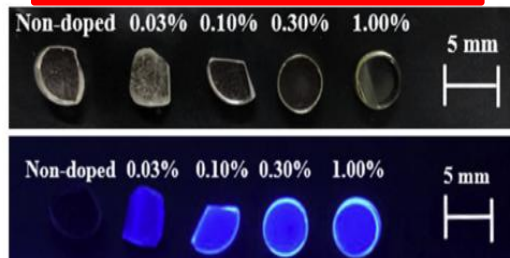


Journal of Alloys and Compounds
782 (2019) 859-864

Nanocrystals

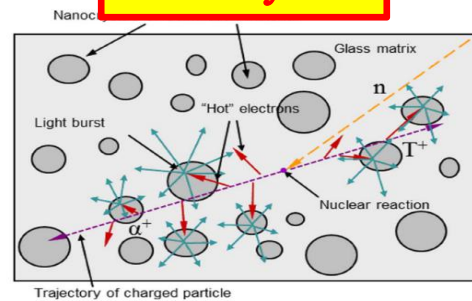


IEEE TNS 60 (2) 2013

Quantum Dots

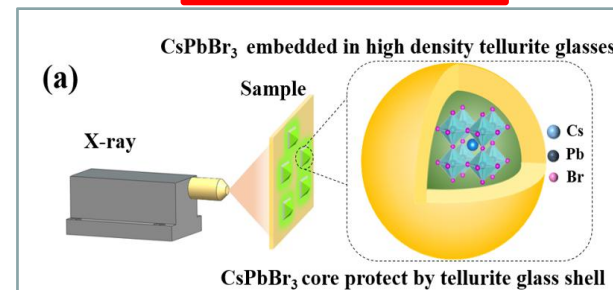

Optics Letters 46(14) 3448-3451 (2021)

Lanthanide + Quantum Dots

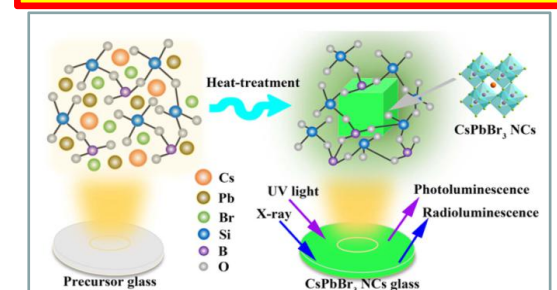

Vol. 9, No. 12 / 2021 / Photonics Research


■ High Light Yield: Lanthanide for the Luminescence Center: Cerium (Ce) ;

■ High Density and Low radioactivity background: Gadolinium (Gd) ;


- 1. The Motivation and the Design
- **2. The Test Facilities for GS;**
 - 2.1 The PMT Lab in IHEP;
 - 2.2 The Radioactive Sources Station;
 - 2.3 The Neutron Beam Test Station;
 - 2.4 The Proton Beam Test Station;
 - 2.5 The XAFS Spectra Station;
- 3. The progress of the GSsamples;
- 4. Summary and Next Plan;

2.1 Test Facilities -- (1) the PMT Lab in IHEP


➤ PMT

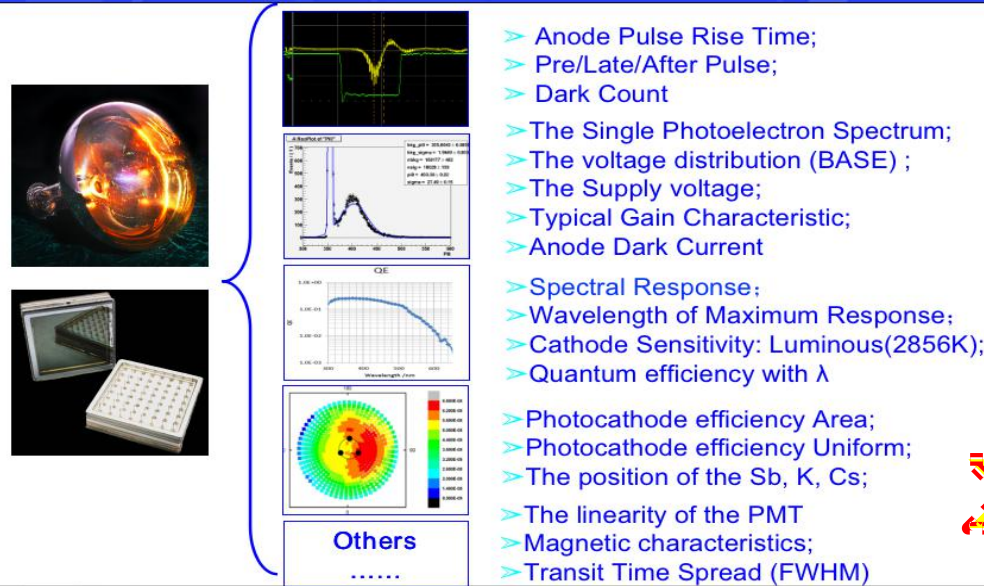

➤ SiPM

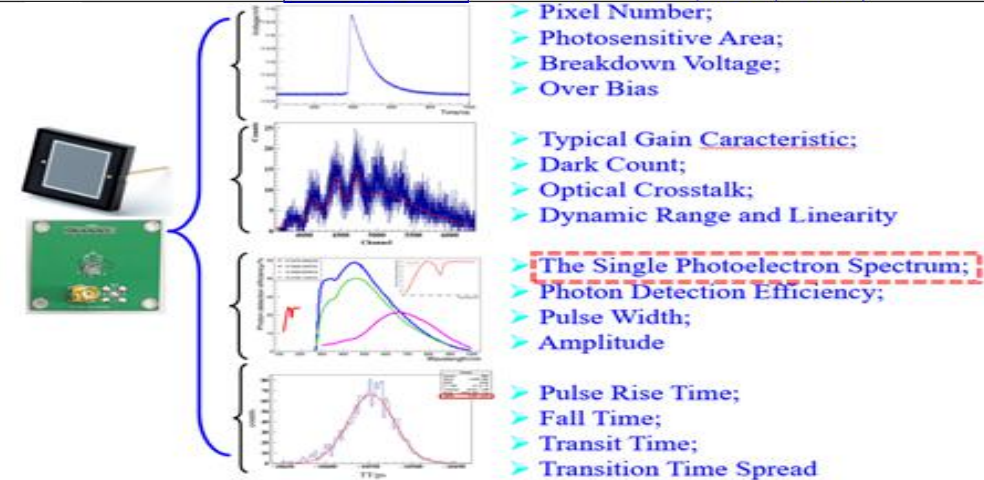

➤ The Scintillator Test System

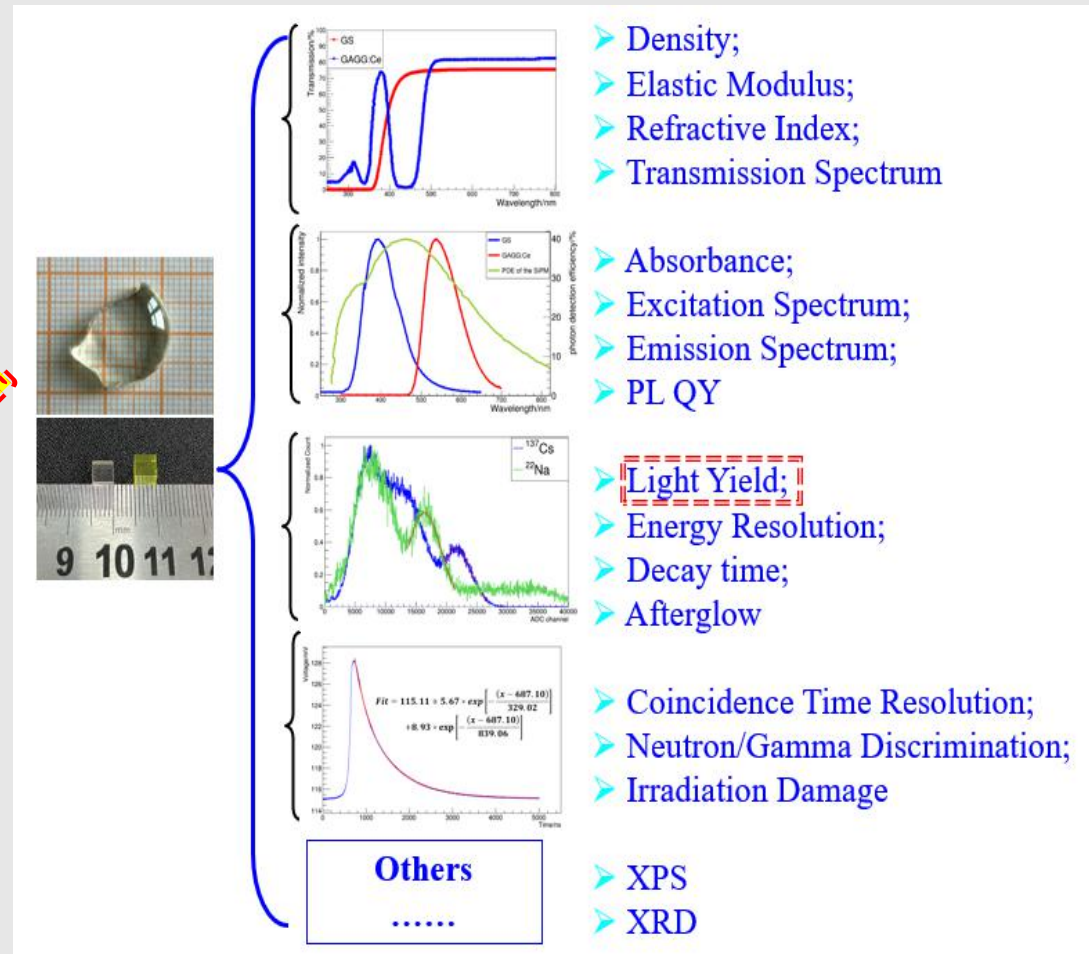


The PMTs information could be see the talk in WG7 <The R&D of the MCP based PMTs for High Energy Physics Detectors>


Energy Spectra

Light Yield @gamma-ray VS @ X-ray

➤ X-Ray Energy Spectra

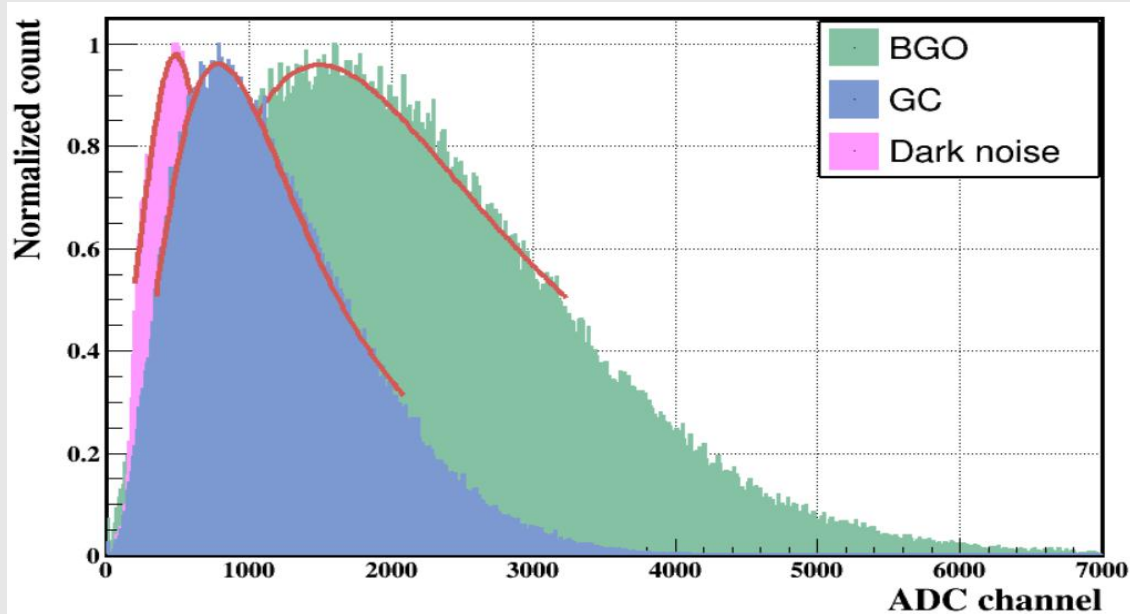



➤ ^{137}Cs γ -Ray Energy Spectra

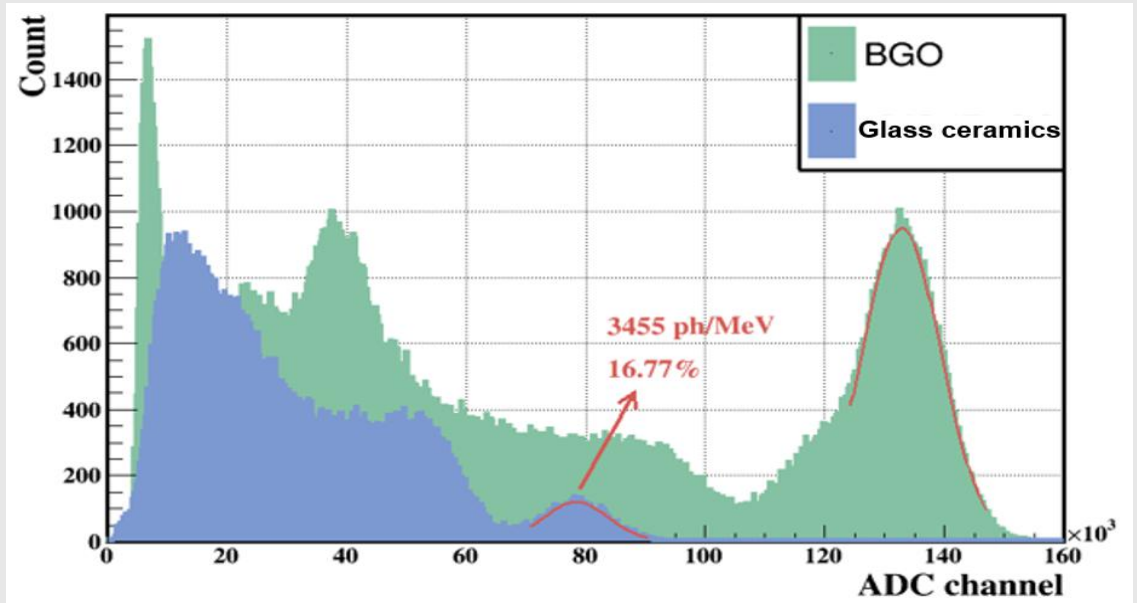


- Under X-ray, the photon number of the GC detected by SiPM is about **32%** of BGO crystal;
- Under ^{137}Cs , the photon number of the GC detected is about **59%** of BGO crystal;
- Therefore, the relative light yield of glass scintillator under X rays is not equal to γ rays.

Emission Spectra


Light Yield @gamma-ray VS @ PL

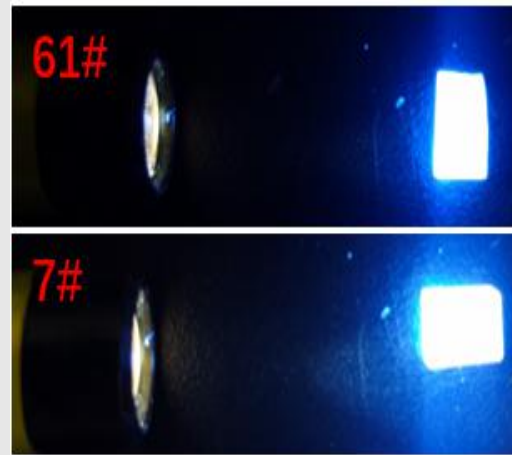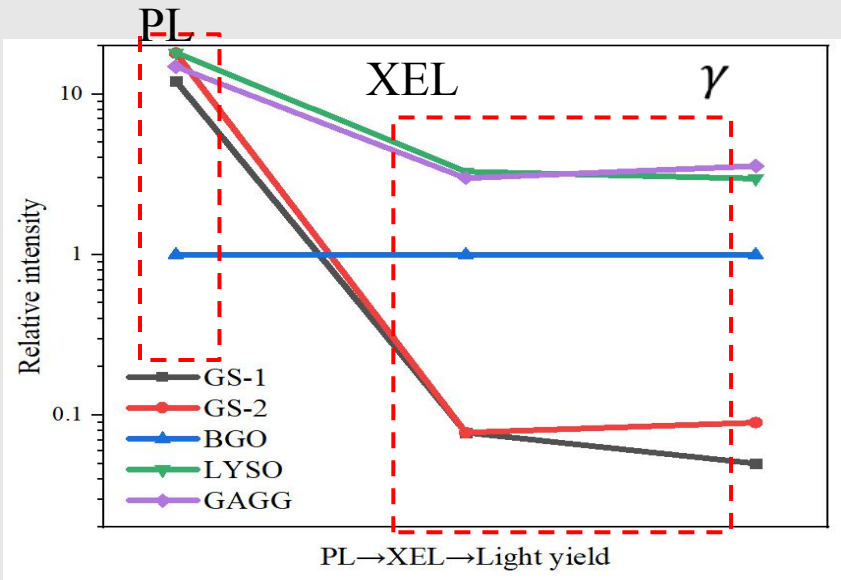

➤ γ -Ray Energy Spectra #61

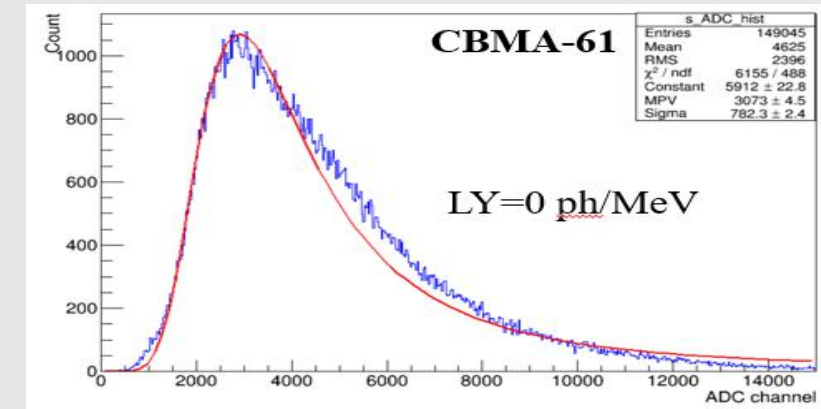

➤ γ -Ray Energy Spectra #07

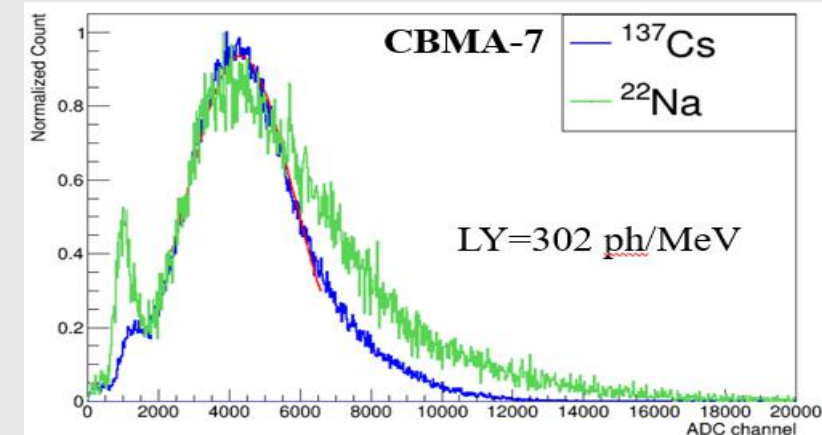

- In a crystal, the XEL intensity is equal to light yield under γ -ray. But its not the case with glass scintillators due to defects and broken bonds.
- Photoluminescence(PL) is not related to its scintillation properties;
- We can obtain high yield glass scintillator in fast, avoid the wrong direction of research, only test the light yield@gamma-ray .


2.2 Test Facilities-- (2) Radioactive Sources Station




- In IHEP Radioactive Sources Station;
- gamma: ^{137}Cs , ^{60}Co , ^{133}Ba ,
- neutron: ^{252}Cf , Am-Be
- electron: ^{90}Sr , ^{22}Na

Through the waveform sampling data acquisition system, we can obtain **Light Yield, Energy Resolution and Decay Time** of the scintillator.


➤ γ/n Energy Spectra

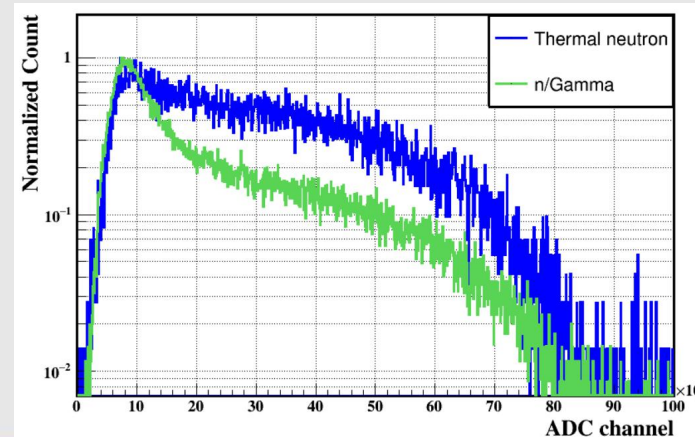


➤ γ/n Decay Time

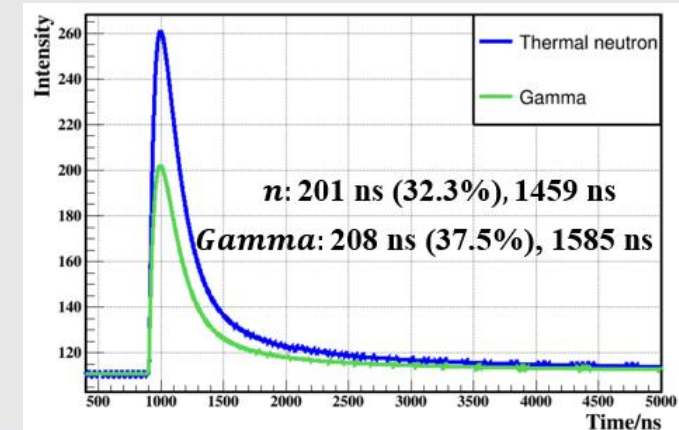


2.3 Test Facilities-- (3) Neutron Beam Test Station

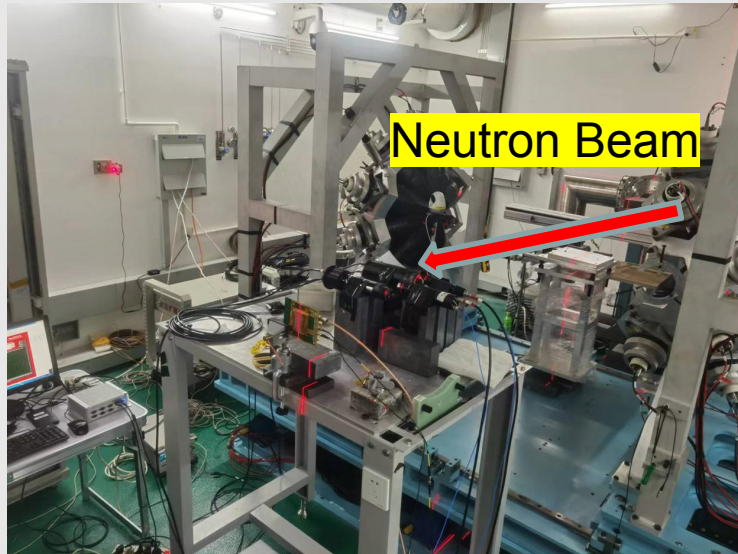


CLYC PSD

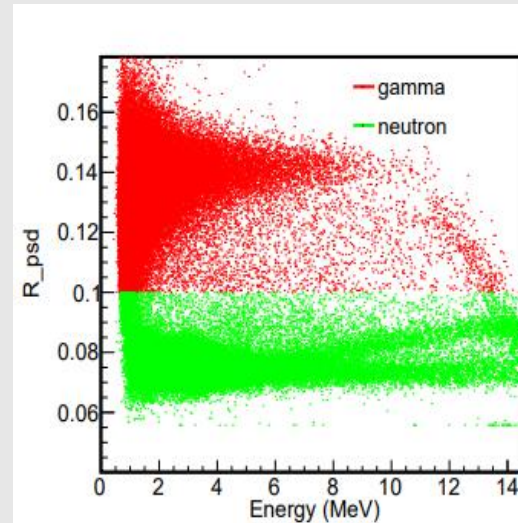

FOM = 1.5

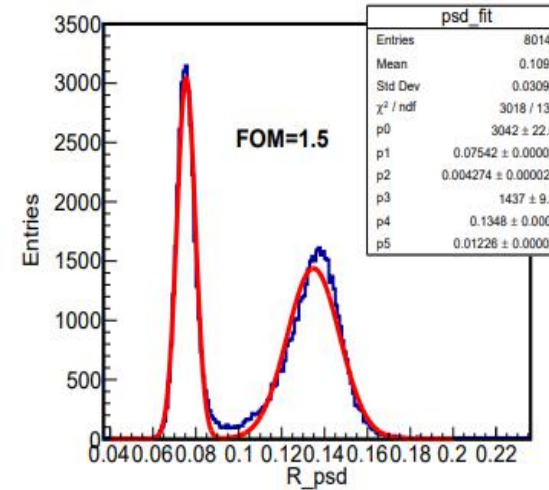

GS PSD

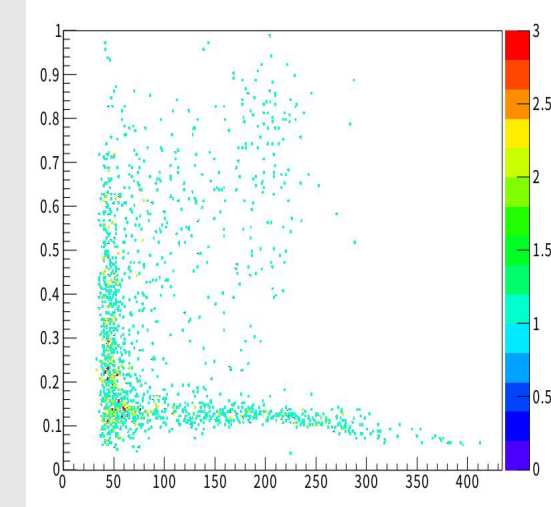


- Beam: 0.1-200 MeV Neutron (CSNS)
- PMT: XP2020
- DAQ: 1Gs/s
- Samples:

Crystals: $\text{Cs}_2\text{LiYCl}_6\text{:Ce}$ (CLYC)


Glass: Ga-Ba-B-Si-Ce

- ❑ The Crystal CLYC is able to perform PSD method discrimination,
- ❑ Ga-Ba-B-Si-Ce³⁺ glass did not distinguish well between neutron and gamma signals with the beam in CSNS.
- ❑ The GS-Gd could test neutron and gamma at the same time;
- ❑ PSD method may not be suitable for GS discrimination.


2.4 Test Facilities-- (4) Proton Beam Test Station

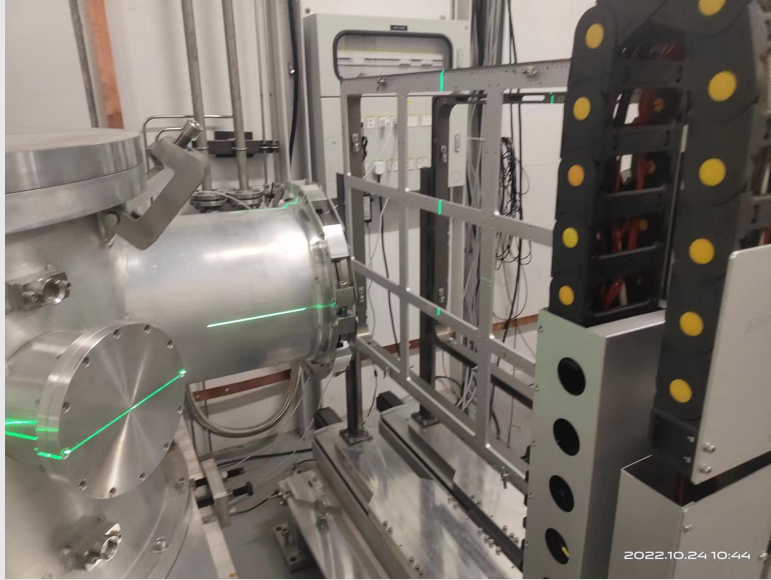

➤ The Transmission Spectra

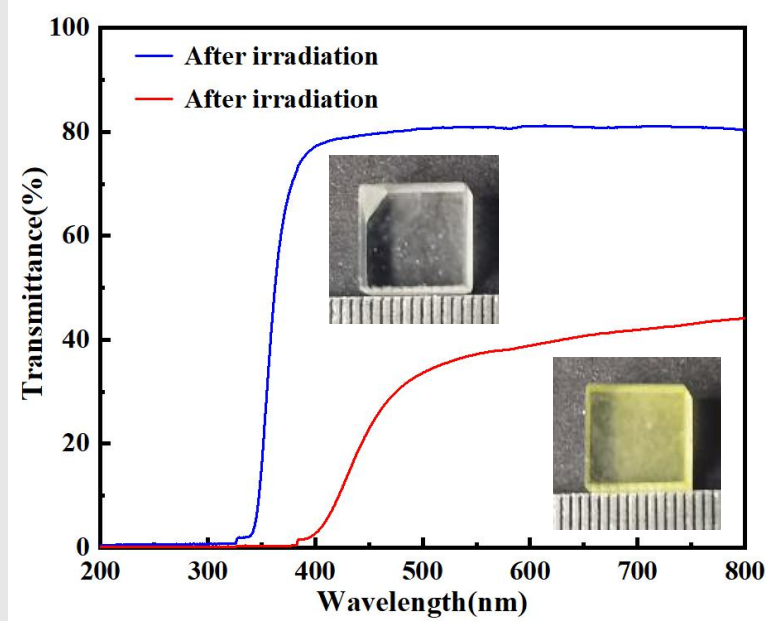

➤ The γ -Ray Energy Spectra

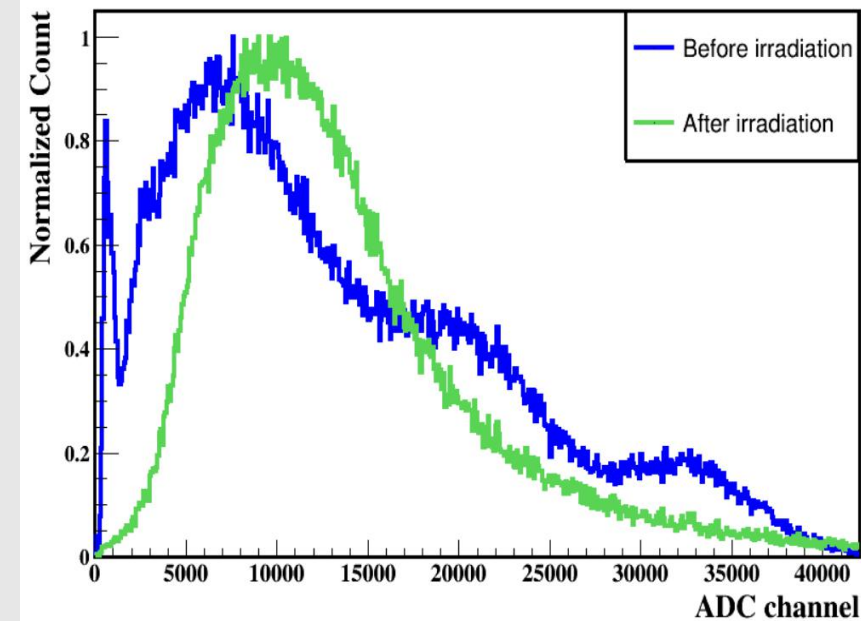

- Beam Energy: 10-80 MeV Proton
- Beam Size: $10 \times 10 \text{ mm}^2$ --- $50 \times 50 \text{ mm}^2$
- Rate: 10^5 - $10^9 \text{ p/cm}^2/\text{s}$;
- Location: IHEP-CSNS


- After being irradiated by proton beam, the transmittance of the sample decreases and the absorption cutoff edge is redshifted.
- The irradiated samples have strong radioactive background, the energy spectrum cannot be measured.
- **Irradiation damage** leads to changes in the internal structure of the sample.

2.5 Test Facilities -- (5) XAFS Spectra Station




- BSRF 4B7B beam line
- Photon energy: 15 to 1000 eV
- Spot size: 1 x 0.1 mm²
- TEY and PFY (Fluorescence mode)
- Synchrotron radiation mode

➤ The γ -Ray Energy Spectra

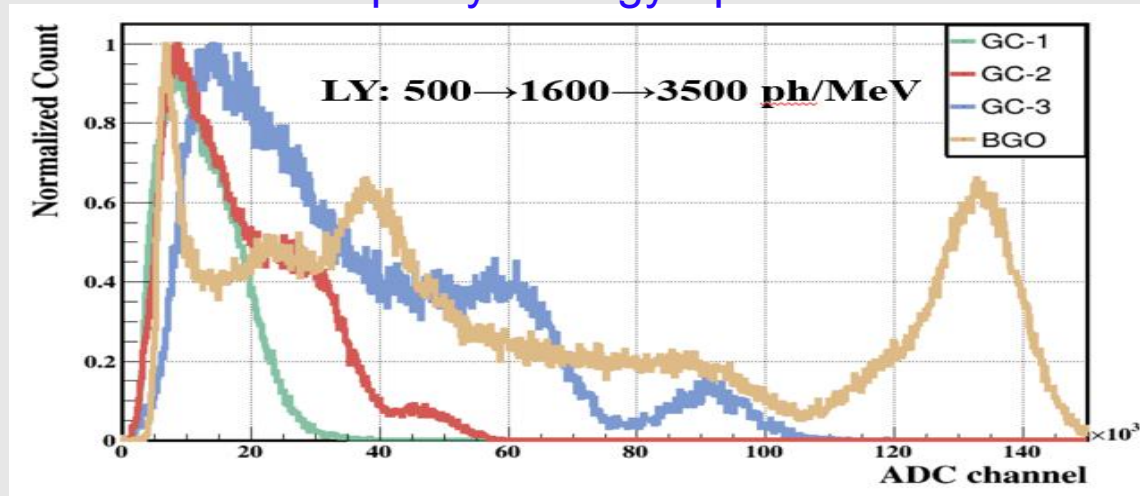

➤ The XAFS Spectra of Ce

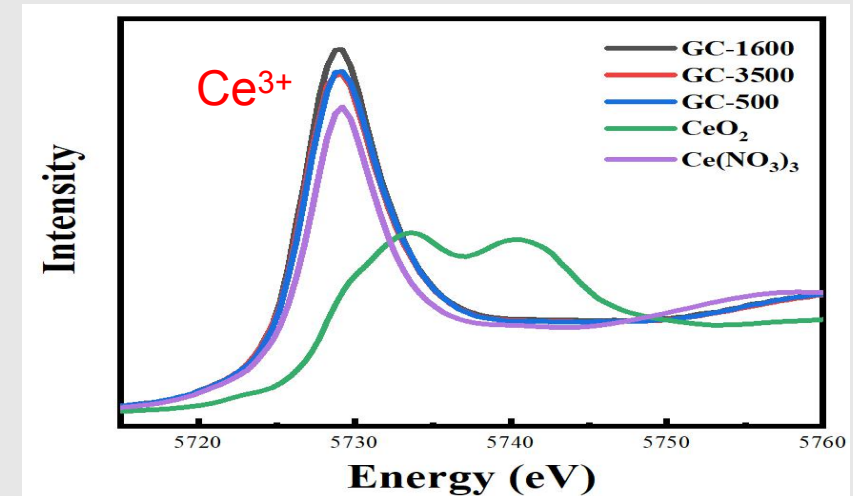

- The XAFS spectra could give the information of the Ce^{3+} Gd^{3+} , which is very important for the **Luminescence Center**;
- For example, the XAFS spectra show the Ce^{3+} concentration in the glasses are similar, but the light yield are different;

Outline


- 1. The Motivation and the Design
- 2. The Test Facilities for GS;
- **3. The progress of the GS;**
 - 3.1 The GS R&D Collaboration Group;
 - 3.2 The Samples of the GS in one year;
 - 2.3 The Neutron Beam Test Station;
 - 2.4 The Proton Beam Test Station;
 - 2.5 The XAFS Spectra Station;
- 4. Summary and Next Plan;

3.1 The GS R&D Collaboration Group





- The Glass Scintillator Collaboration Group established in Oct.2021;
- The Experts of the GS in the University, Institute and Industry are still welcomed to join us (qians@ihep.ac.cn).

3.2 The GS Samples produced in one year (>200)

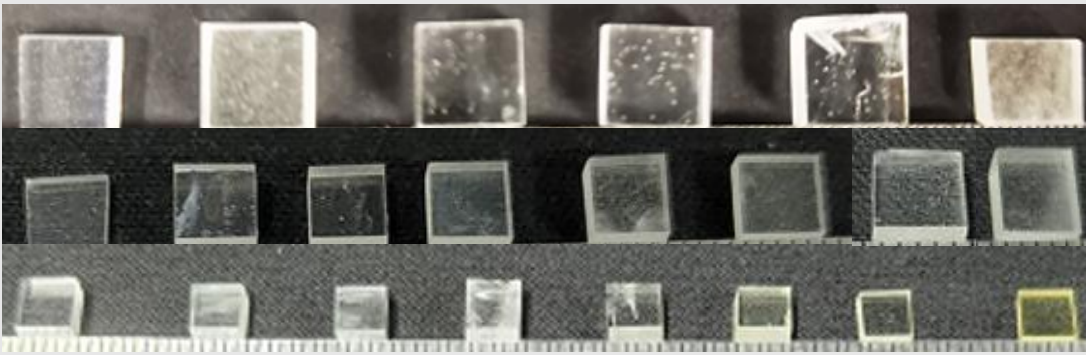


Gd-Ga-B-Ce³⁺ glass
20mm*20mm*12mm

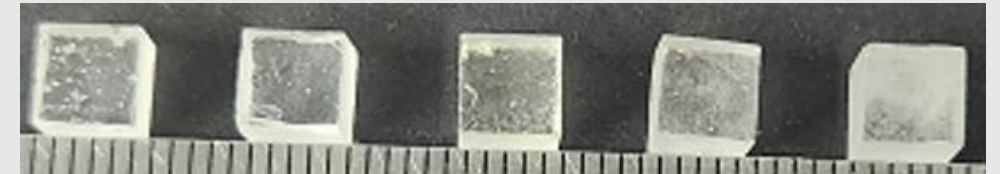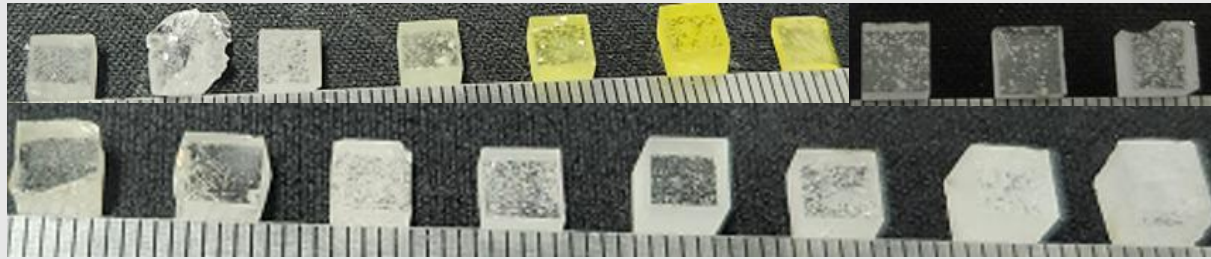

Gd-Al-B-Si-Ce³⁺ glass
42mm*51mm*10mm





Gd-Al-B-Si-Ce³⁺ glass
37mm*30mm*9mm

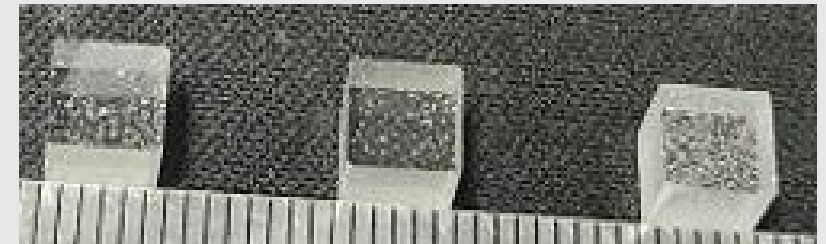

3.3 Borosilicate Glass (Gd-Al-B-Si-Ce³⁺)



- Density~6.0 g/cm³
- LY>1000 ph/MeV
- ER=49.55%

- Density~4.5 g/cm³
- LY=802 ph/MeV
- ER=26.77%


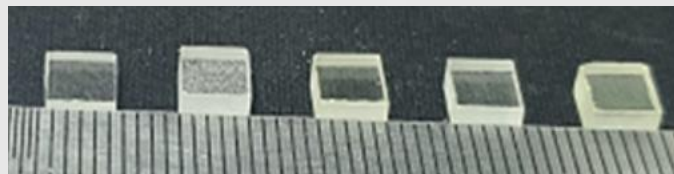
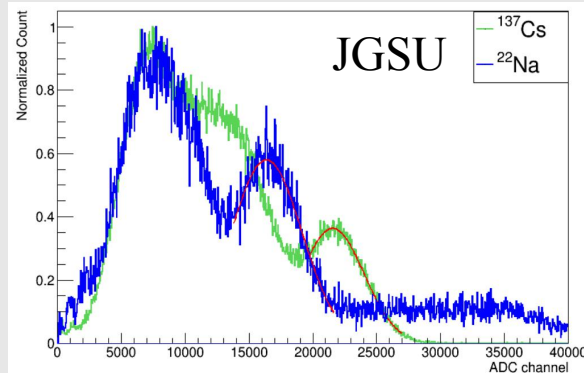


(2022.05) Opt. Mater. 2022(130): 112585

- Density~4.0 g/cm³
- LY>1200 ph/MeV
- ER=23.22%

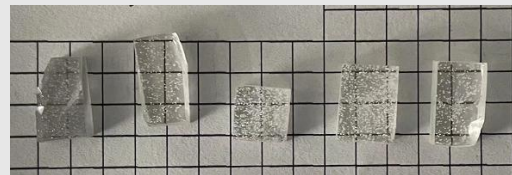
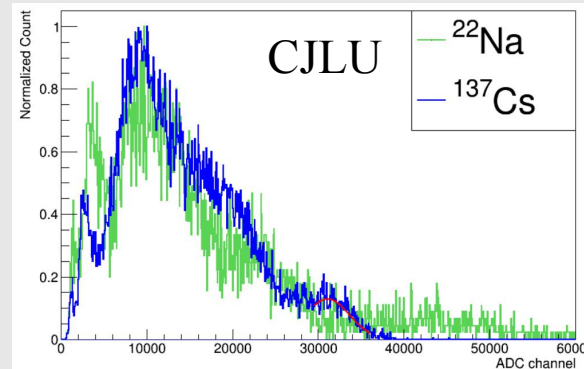


- Density~5.5 g/cm³
- LY=1117 ph/MeV
- ER=35.80%

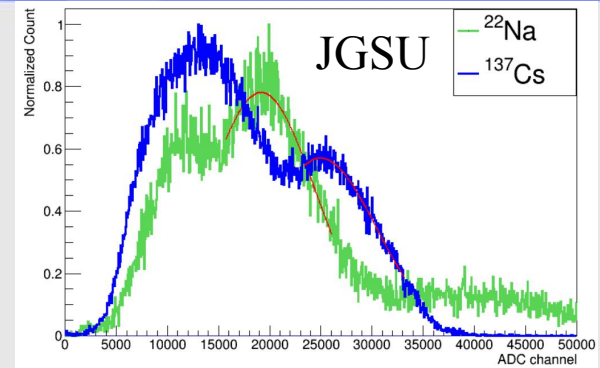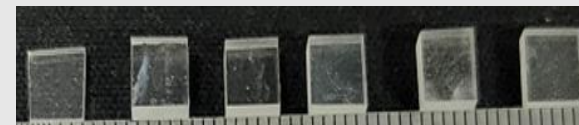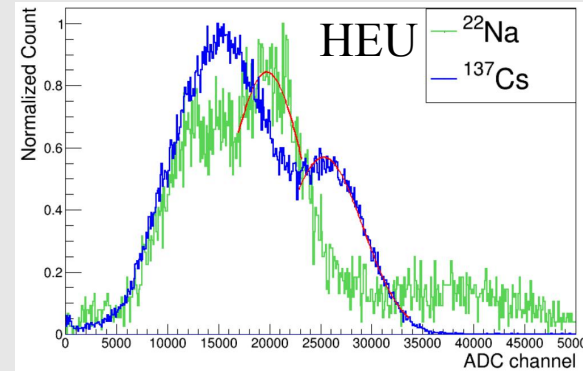

2022.11

Density=5.1 g/cm³
LY=660 ph/MeV

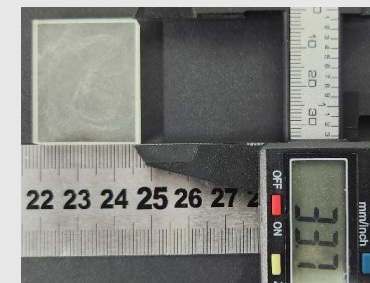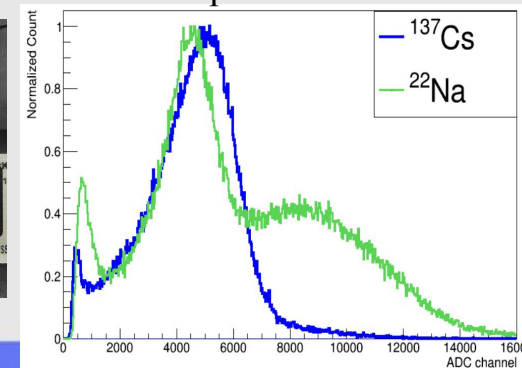

26mm*34mm*4mm

2022.10


2022.06

2021.11

3.4 Glass Ceramic (Gd-Y-K-Si-Ce³⁺)



About Glass Ceramic could be seen in these Ref.
(2021.07) Opt. Lett. (2021), 46(14), 3448;
(2021.11) J. Mater. Chem. C, 2021, 9, 17504;
(2022.11) J. Eur. Ceram. Soc., 2022;

- Density~ 3.3 g/cm³
- LY=519 ph/MeV
- ER=None

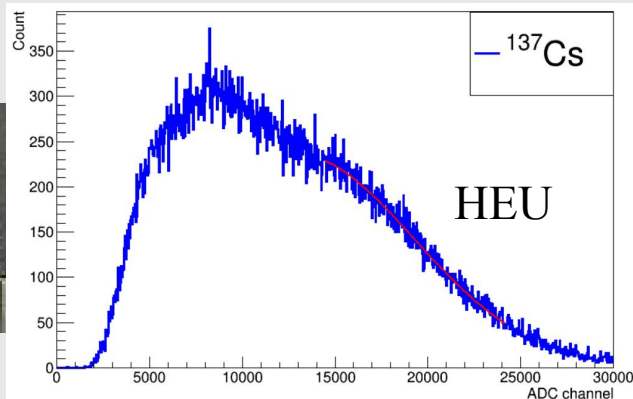



(2022.10) J. Mater. Chem. C, 2021, 9, 17504

- Density~ 3.3 g/cm³
- LY>1600 ph/MeV
- ER=27.27%

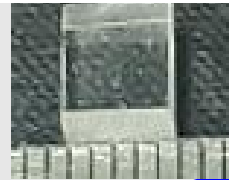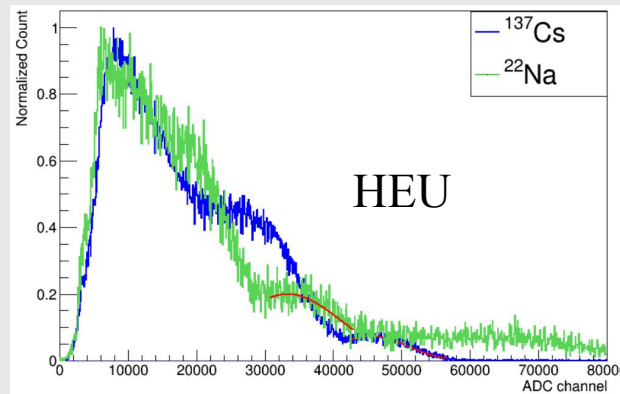

2022.10

- Density~3.3 g/cm³
- LY>3400 ph/MeV
- ER=16.77%

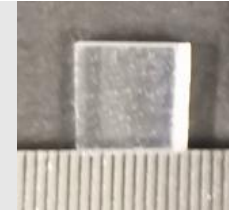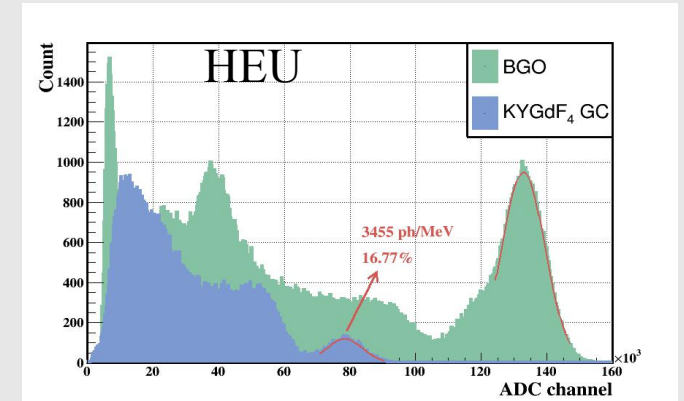


2022.11

2022.04

3.5 The Bottleneck


to be more: The **Uniformity** ?

➤ Small Sample in the Collage Lab

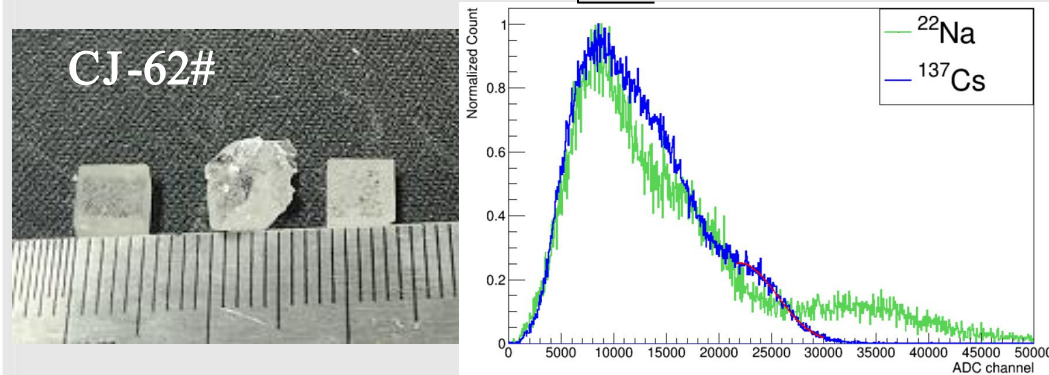


LY=**923** Ph/MeV; ER=37.12%

➤ Sample Array in Factory

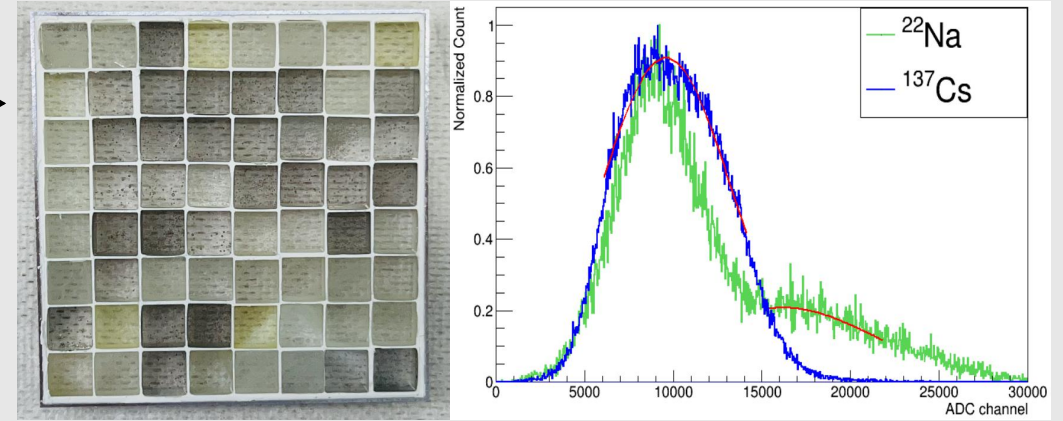

LY=**346** ph/MeV

➤ Large Sample in Factory

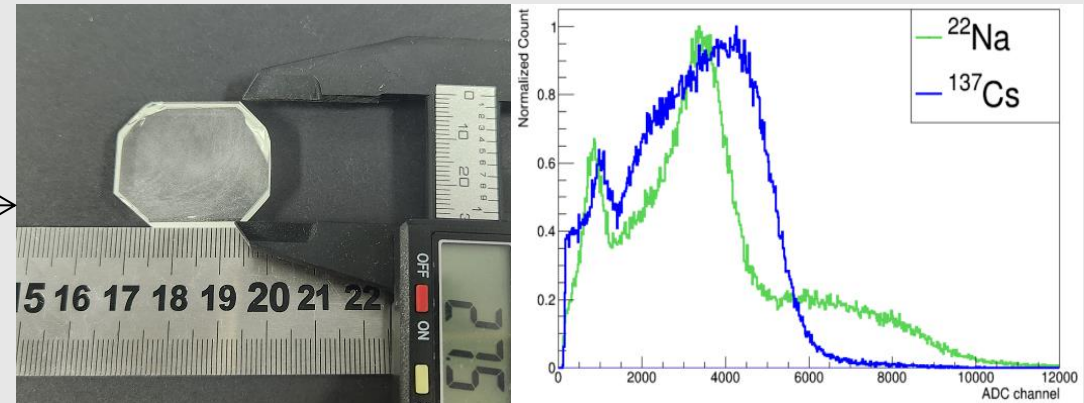


LY=**466** ph/MeV

to be Large: The **Repeatability** ?

Outline

- 1. The Motivation and the Design
- 2. The Test Facilities for GS;
- 3. The progress of the GS;
- 4. Summary and Next Plan;

4.1 Summary

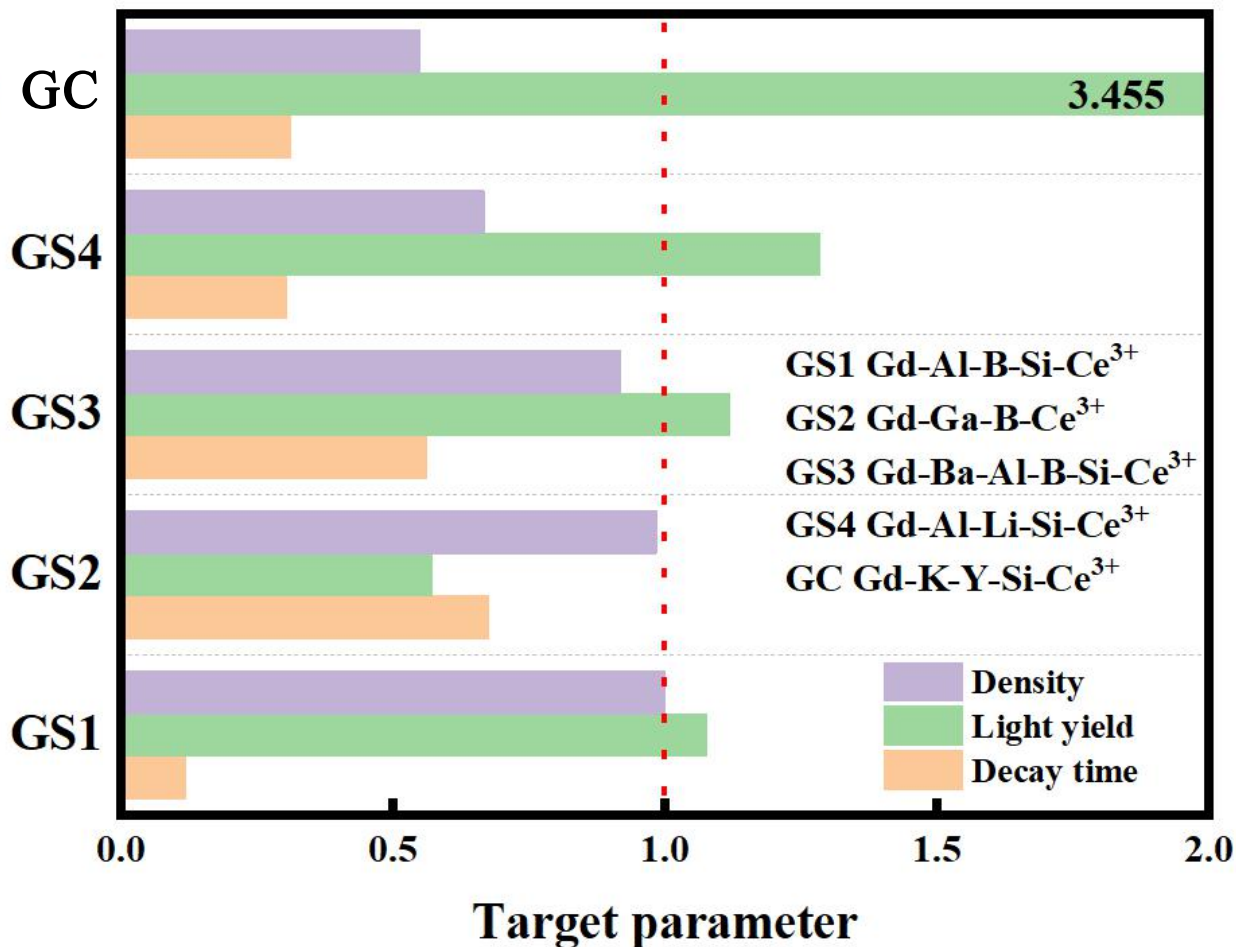

Glass scintillator of high density and light yield

■ 6.0 g/cm³ & 1050 ph/MeV—Gd-Al-B-Si-Ce³⁺ glass

■ 5.5 g/cm³ & 1100 ph/MeV—Gd-Ba-B-Si-Ce³⁺ glass

■ Ultra-high density Tellurite Glass—6.6 g/cm³

■ High light yield Glass Ceramic—3500 ph/MeV

■ Fast scintillating Decay Time—100 ns

■ Large size Glass—42mm*51mm*10mm

4.2 The Scintillator data

Typy	Composition	Density (g/cm ³)	Light yield (ph/MeV)	Decay time (ns)	Emission peak(nm)	Price/1 c.c (RMB)
Glass Scintillator in Paper	Ce-doped high Gadolinium glass ^[1]	4.37	3460	522	431	~10
	Ce-doped fluoride hafnium glass ^[2]	6.0	2400	23.4	348	150
Plastic Scintillator	BC408 ^[3]	~1.0	5120	2.1	425	60
	BC418 ^[3]	~1.0	5360	1.4	391	80
Crystal	GAGG:Ce ^[4]	6.6	50000	50	560	2400
	LYSO:Ce ^[5]	7.1	30000	40	420	1200
	BGO ^[6]	7.3	8000	300	480	800
Glass Scintillator for CEPC (preliminary target)	?	>7	>1000	< 100	350-500	~1
Stuaus of Glass Scintillator	?	>6	>1000	< 200	350-500	~?

[1] Struebing, C. *Journal of the American Ceramic Society*, 101(3). [2] Zou, W. *Journal of Non-Crystalline Solids*, 184(1), 84-92. [3] Plastic Scintillators | Saint-Gobain Crystals. [4] Zhu, Y. Qian, S. *Optical Materials*, 105, 109964. [5] Ioannis, G. *Nuclear Instruments & Methods in Physics Research*. [6] Akapong Phunpueok, et al. *Applied Mechanics and Materials*, 2020,901:89-94.

4.3 Next Plan

Gd-Al-B-Si -Ce³⁺ glass will be the focus of future research.

- The glass scintillators were prepared repeatedly to ensure its performance stability;
- The properties of the glasses will be further improved through **raw material purification**;
- to Reduce the scintillation decay time of the glasses (<100 ns);
- to produce the Large size and mass preparation samples;
- Test the radiation resistance and mechanical properties of the glasses;



闪烁玻璃合作组
Glass Scintillator Collaboration



See the unseen
change the unchanged



The Innovation

THANKS