



DARK ENERGY
SURVEY

DECaI

the Spectrophotometric Calibration System for DECam

System Throughput

System Monitoring

Some aspects of DES CCDs

Transmission Curves, Transfer functions, etc.

W. Wester – Fermilab


DECaI team includes folks at Texas A&M
including J.P. Rheault, Jen Marshall, Ting Li,
and Darren DePoy plus David James at CTIO




System throughput

DARK ENERGY
SURVEY


Primary mirror is Al + dust

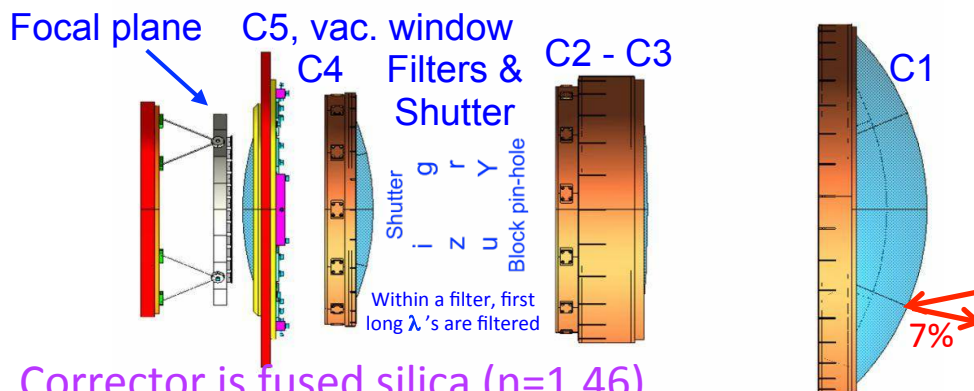



Corrector is fused silica ($n=1.46$).
C2-C5 have multi-layer coatings of MgF_x .

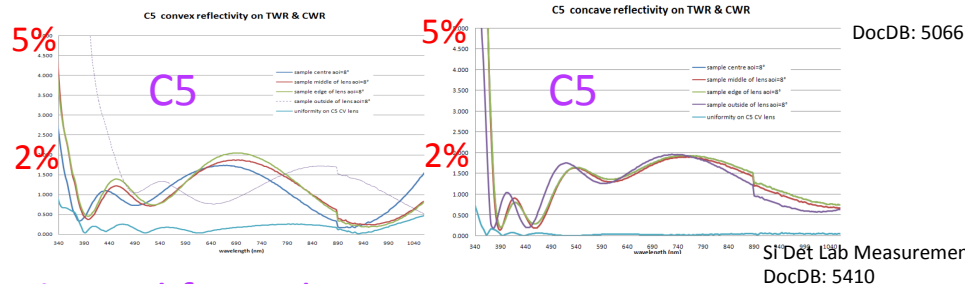

SiDet Lab Measurements
DocDB: 5410

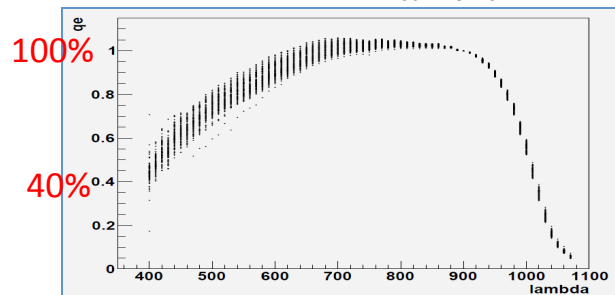


+ Atmosphere!

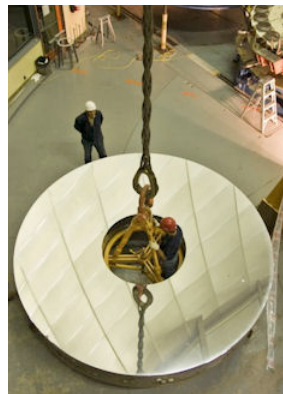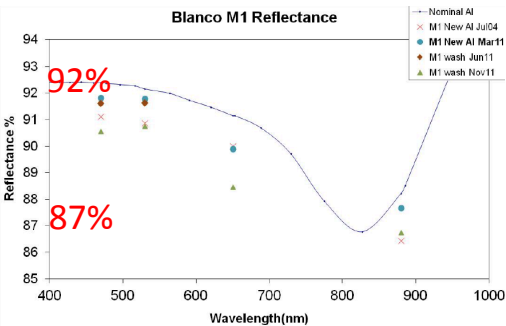

www.ctio.noao.edu/DocDB/0004/000402/001/Blanco_R%25-log-file.pdf

Filters engineered to provide
bandpasses with multilayered coatings,
DECal + vendor measurements agree.

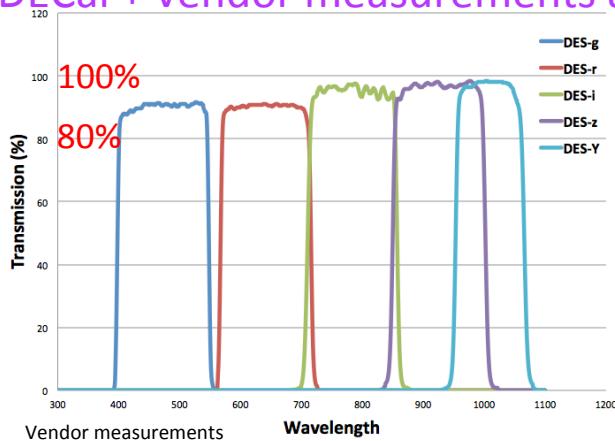


CCDs QE optimized for red
until bandgap ($\sim 1100\text{nm}$) –
poly-Si + AR reflectance
ITO/SiO₂ cuts short
 λ 's ($\sim 350\text{nm}$)



DECaI

- The DECaI flat field system is capable of generating system response maps by scanning projected light of known wavelength and intensity onto a flat screen

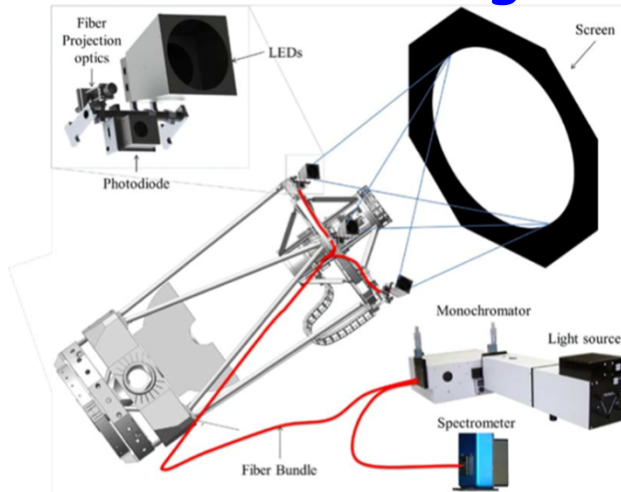

Hardware built
by Texas A&M.

- 1) Daily flat field illumination using LEDs
- 2) Periodic scans using monochromator light carried up by fibers

- Scans taken 2012: Oct, Nov 2013: Feb Jun, July, Sept, Oct, Nov and
2014: May, July, Aug, Sept, Oct
- (1) Monitor changes in relative throughput (SDSS observed effects)
- (2) Relative system response curves vs function of focal plane position




DECAL raw data products

DARK ENERGY
SURVEY


• Images

- "ON": 30 sec exposure during fiber illumination
- "OFF": 30 sec exposure, no fiber illumination
 - Typically every 5th exposure is an OFF
 - Bkgd light is small (but non-zero) inside the darkened dome - watch for twilight!
- Overscan correction removes occasional small (few counts) jumps
- Can apply individual gain and QE corrections (+/- 10%) or a correction that matches edges of the CCDs (effective gain x QE)

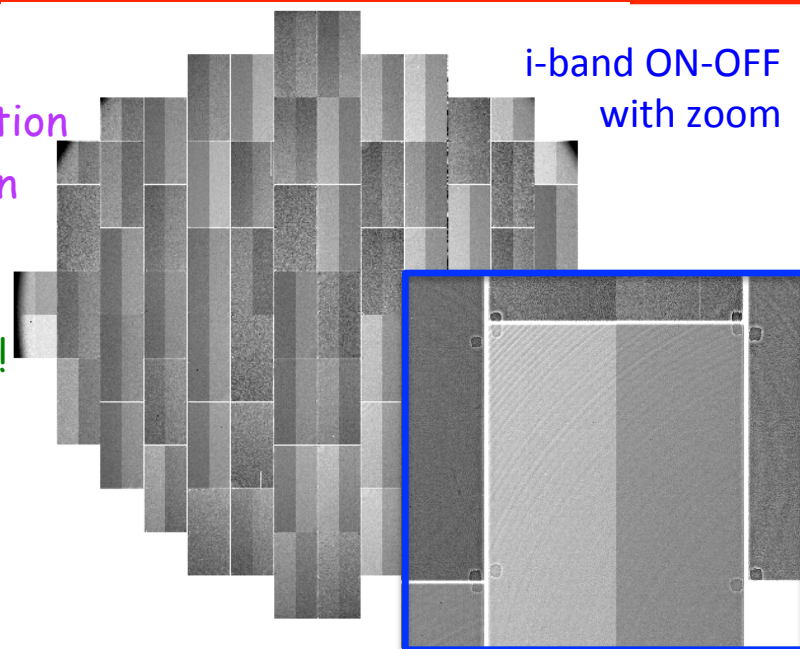

• Data from spectrophotometric system

- Measured wavelength of the output of a fiber
- Intensity of light on the screen with NIST calibrated photodiodes
- Settings, temperature readings, time stamps, etc.

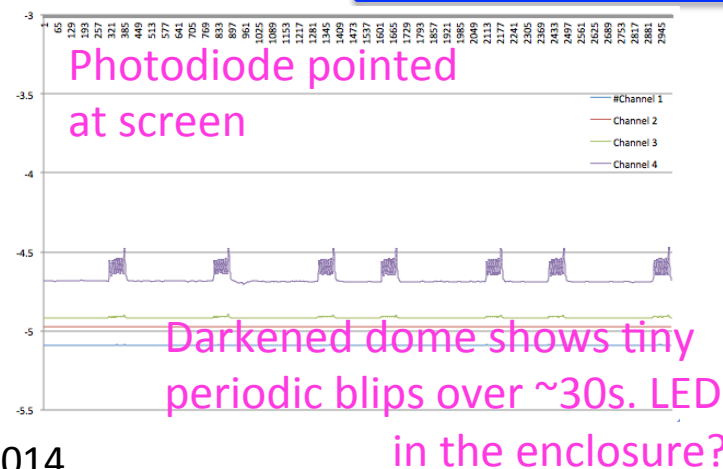



Study OFF data



Point to the Flat Field Screen in the darkened dome and take exposures

DARK ENERGY
SURVEY

Selected CCDs (amp1/amp2)
1, 2, 11, 15, 25, 35, 45, 55

At each wavelength, compute the average of 288
super-pixels/amplifier and subtract from global average.

Average usually
stable to ± 0.5 cnts
with an occasional
outlier of ± 3 cnts.
These outliers are
removed by sub-
tracting the overscan
then, fluctuations
vs time over an hour
are < 0.1 cnt.

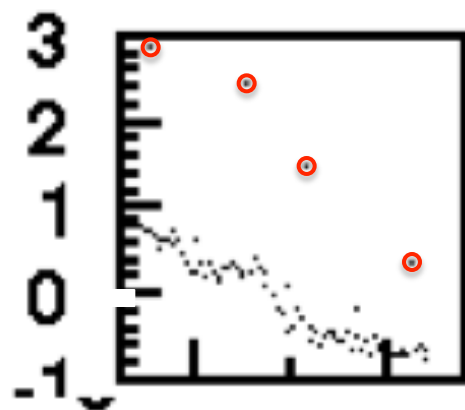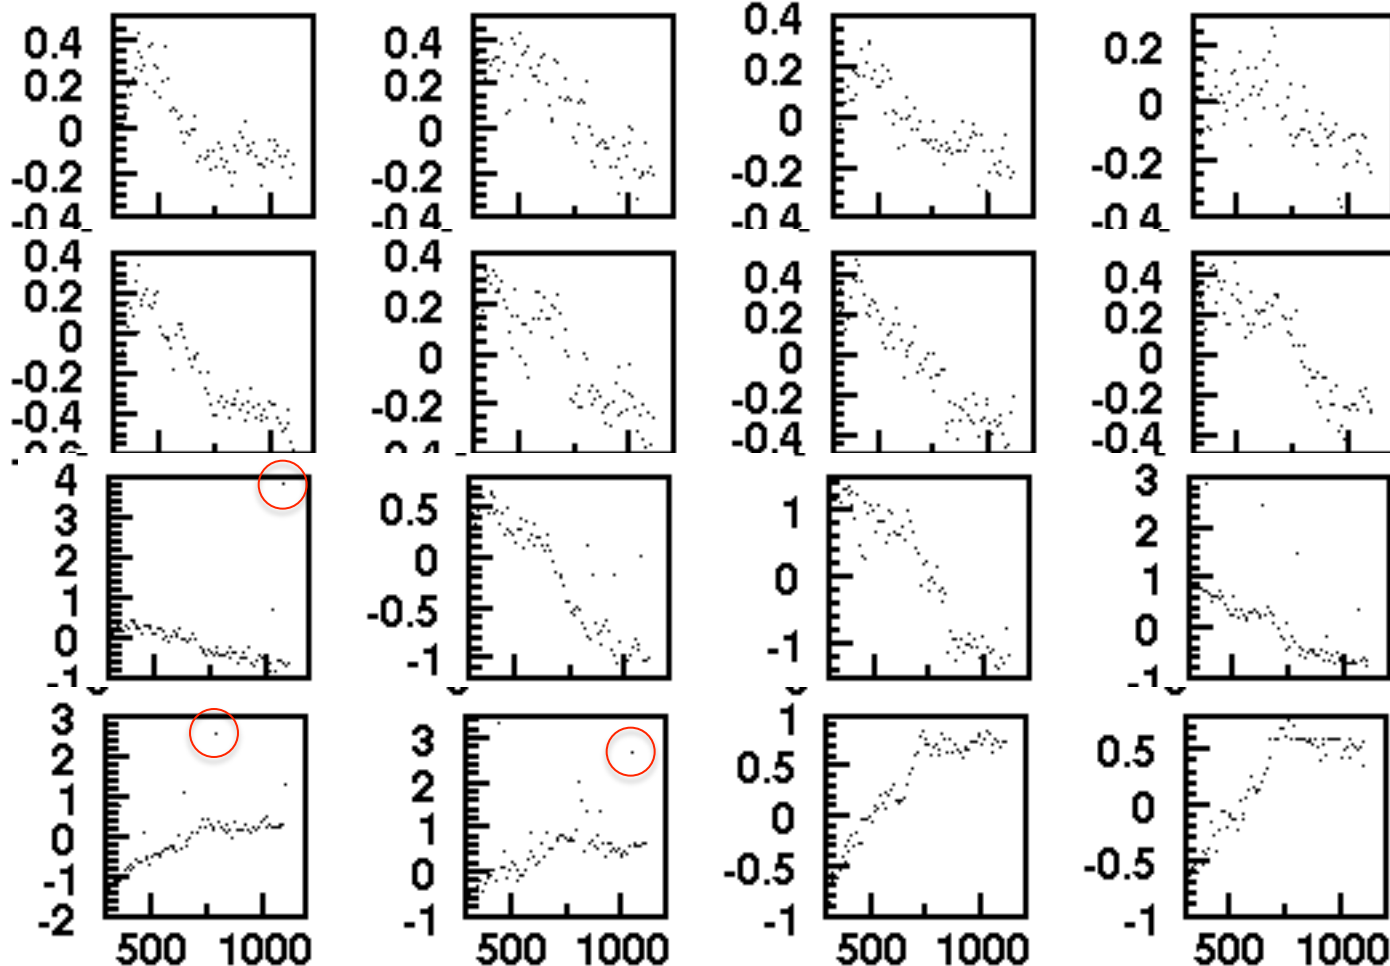





A look at bias exposures

Keep the shutter closed, just take 0s exposures

DARK ENERGY
SURVEY

- Analyze as DECam exposures (ON-OFF) where ON is the exposure of interest and OFF is a earlier bias exposure
- Compute (middle 68%) average in a little box of 110×162 pixels where each CCD has 18×25 boxes (removes edge pixels)
 - griz note: divide the average by a single "edge matching" number per amp
- Study the 11 bias exposures after LED flat field sequence
 - Note: each of the biases has an earlier single bias exposure subtracted from it.

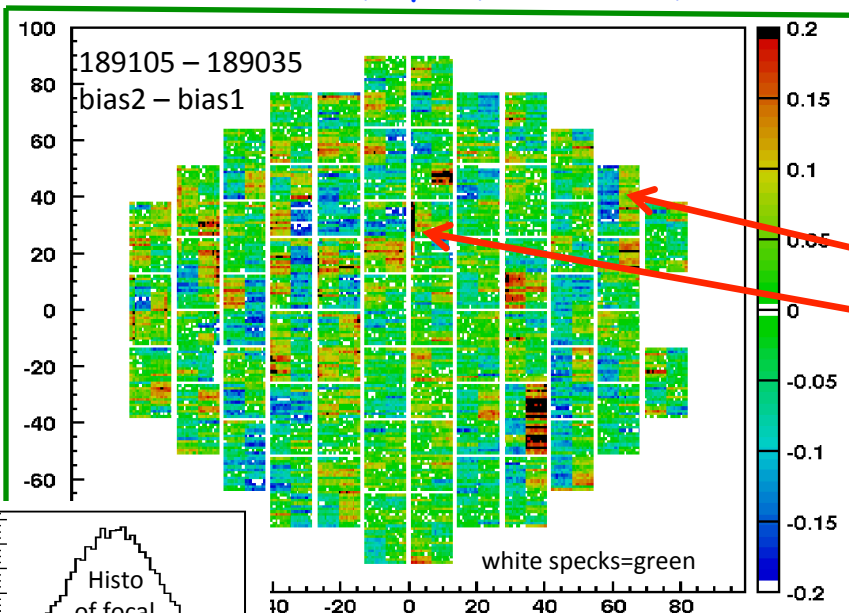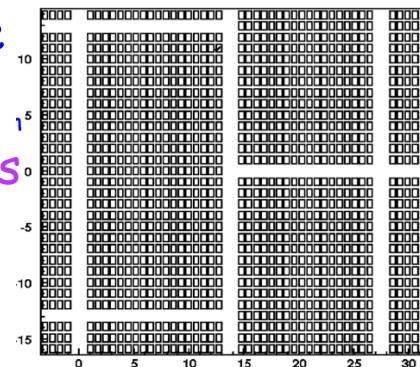

Difference of two bias exposures


Note: differences are typically < 0.2 cnts.

Other observations:

- Collection of rows have correlated shifts.
- An occasional discrepant column.

Small observation:


1st of 11 bias exposures has between 0.5-1.6 ADC counts difference per pixel as shown – other exposures < 0.2 cnts.

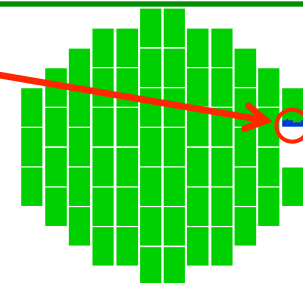





Throughput vs wavelength

DARK ENERGY
SURVEY

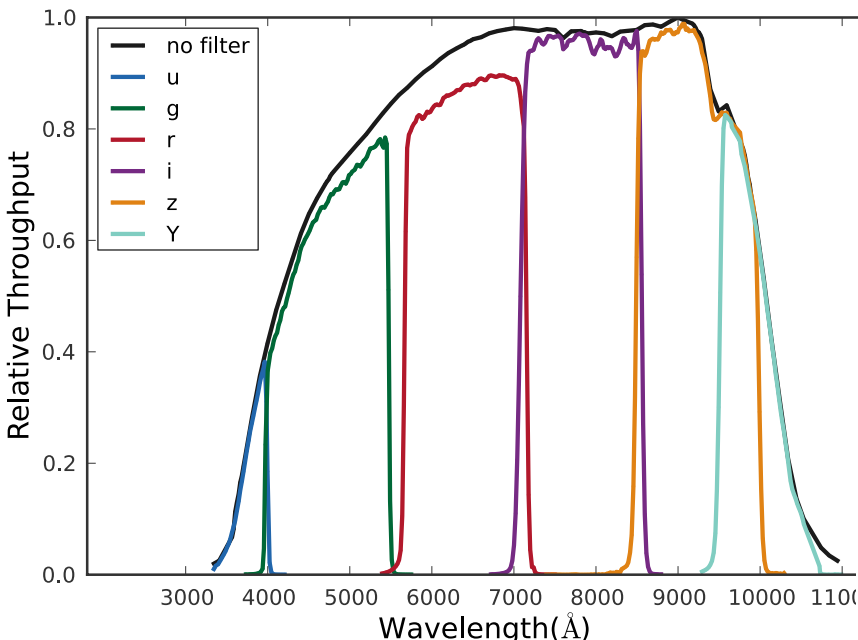

System throughput vs wavelength is measured by DECaI, is monitored through periodic scans with some attention to the blue and red filter edges. Data product of the average response is provided.

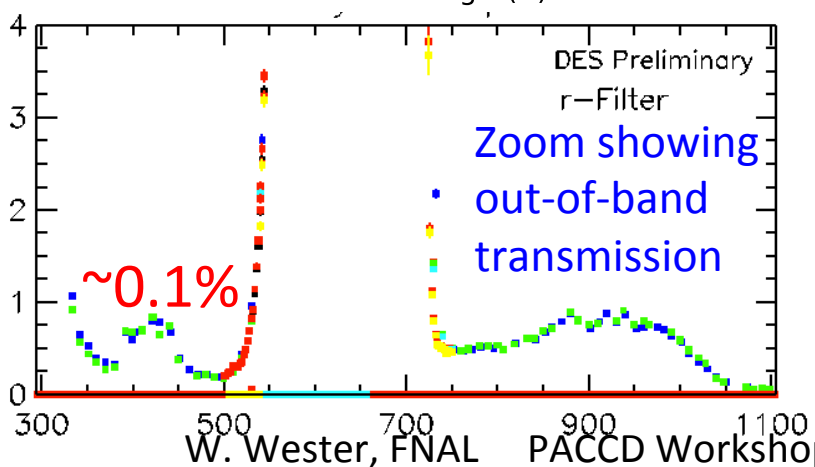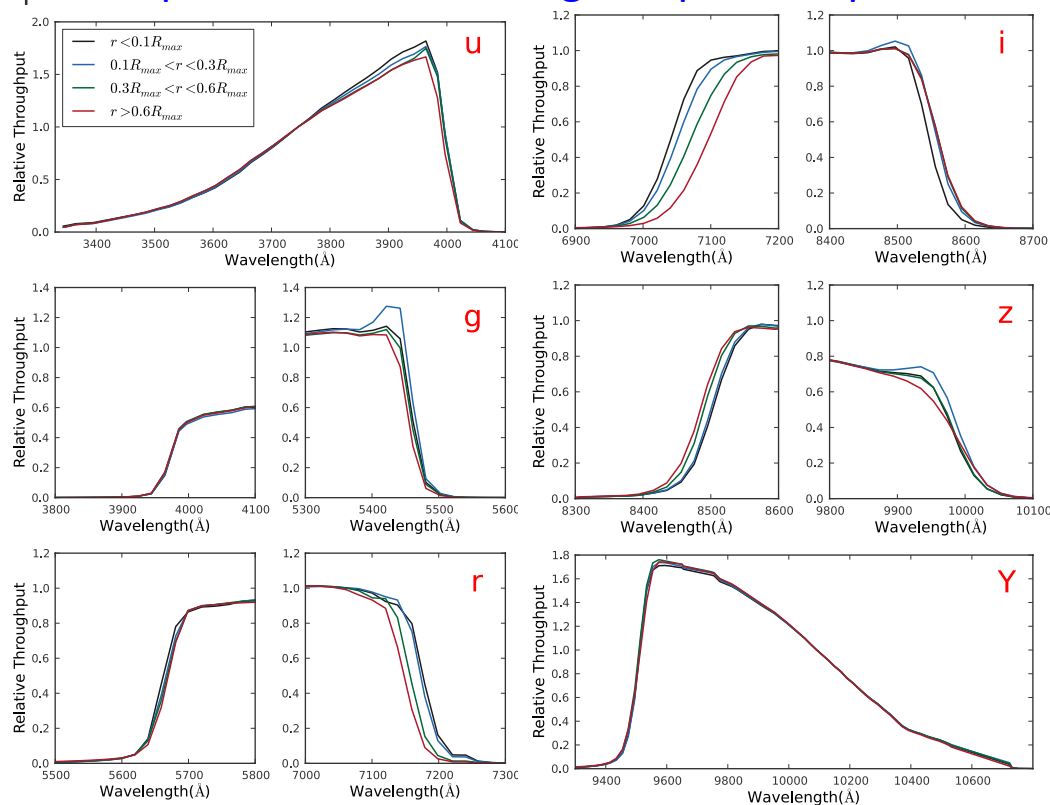



Throughput vs focal plane position

DARK ENERGY
SURVEY

Truncated average response ON-OFF (overscan, gain, intensity corrections)

Normalized to the response with noFilter. Illumination effects, ghosts, filter variation contribute.

Single wavelength on rising edge as shown:

u-band: 350nm g-band: 450nm
r-band: 570nm i-band: 710nm
z-band: 850nm Y-band: 950 nm

~10%


Single wavelength in middle of bandpass as shown:

u-band: 380 nm g-band: 500 nm
r-band: 650 nm i-band: 800 nm
z-band: 950 nm Y-band: 1000 nm

~1-2%

Single wavelength on falling edge as shown:

u-band: 400nm g-band: 550nm
r-band: 720nm i-band: 860nm
z-band: 1000nm Y-band: 1040 nm

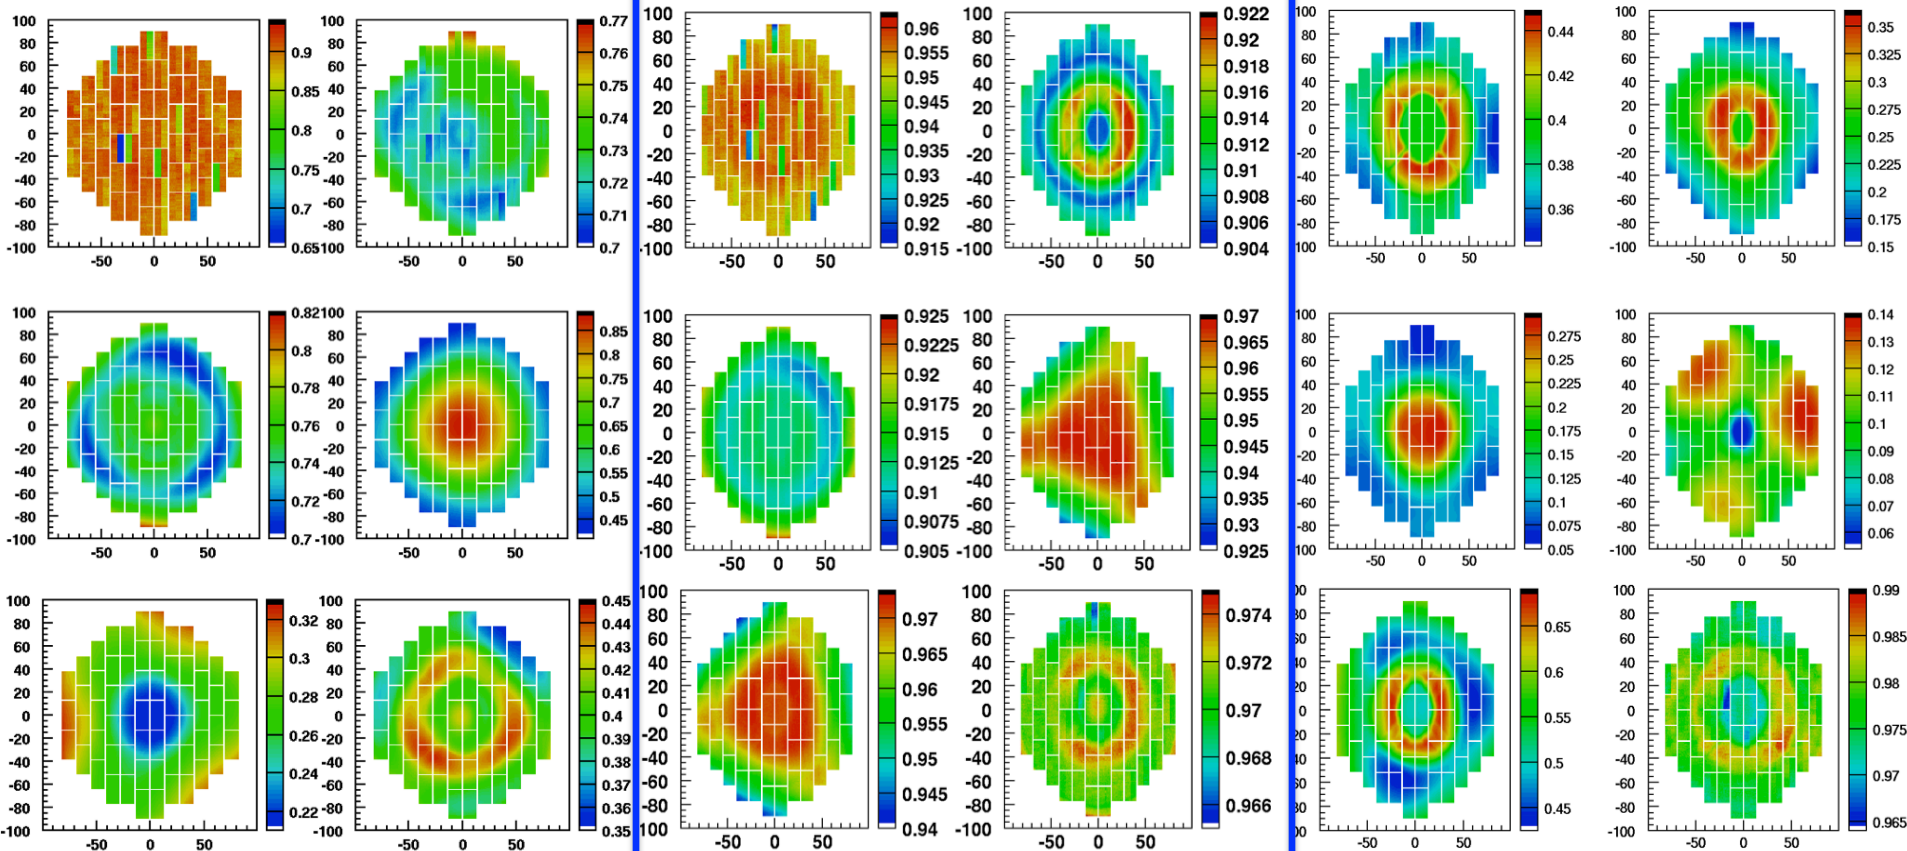




Caveats

There are a number of additional caveats in using the system response curves. In particular, separating pupil ghost effects from illumination effects and radial dependence.

Note also that the detrending of DES images include dividing by the LED flat field (which has its own spectral illumination) and then removing pupil ghost effects via star flats

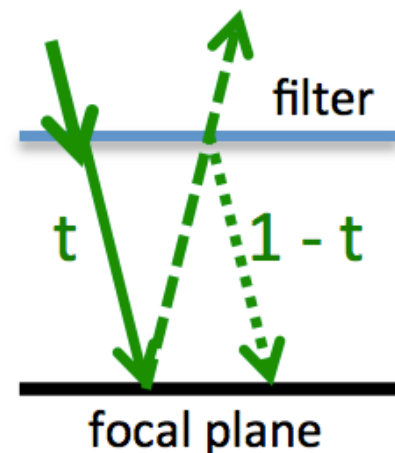


DECal is for relative response. There is a program to collect DA white dwarf spectra to set both “absolute color” and with other data, also set absolute magnitude scales.



DARK ENERGY
SURVEY

Full throughput (system + atmosphere)

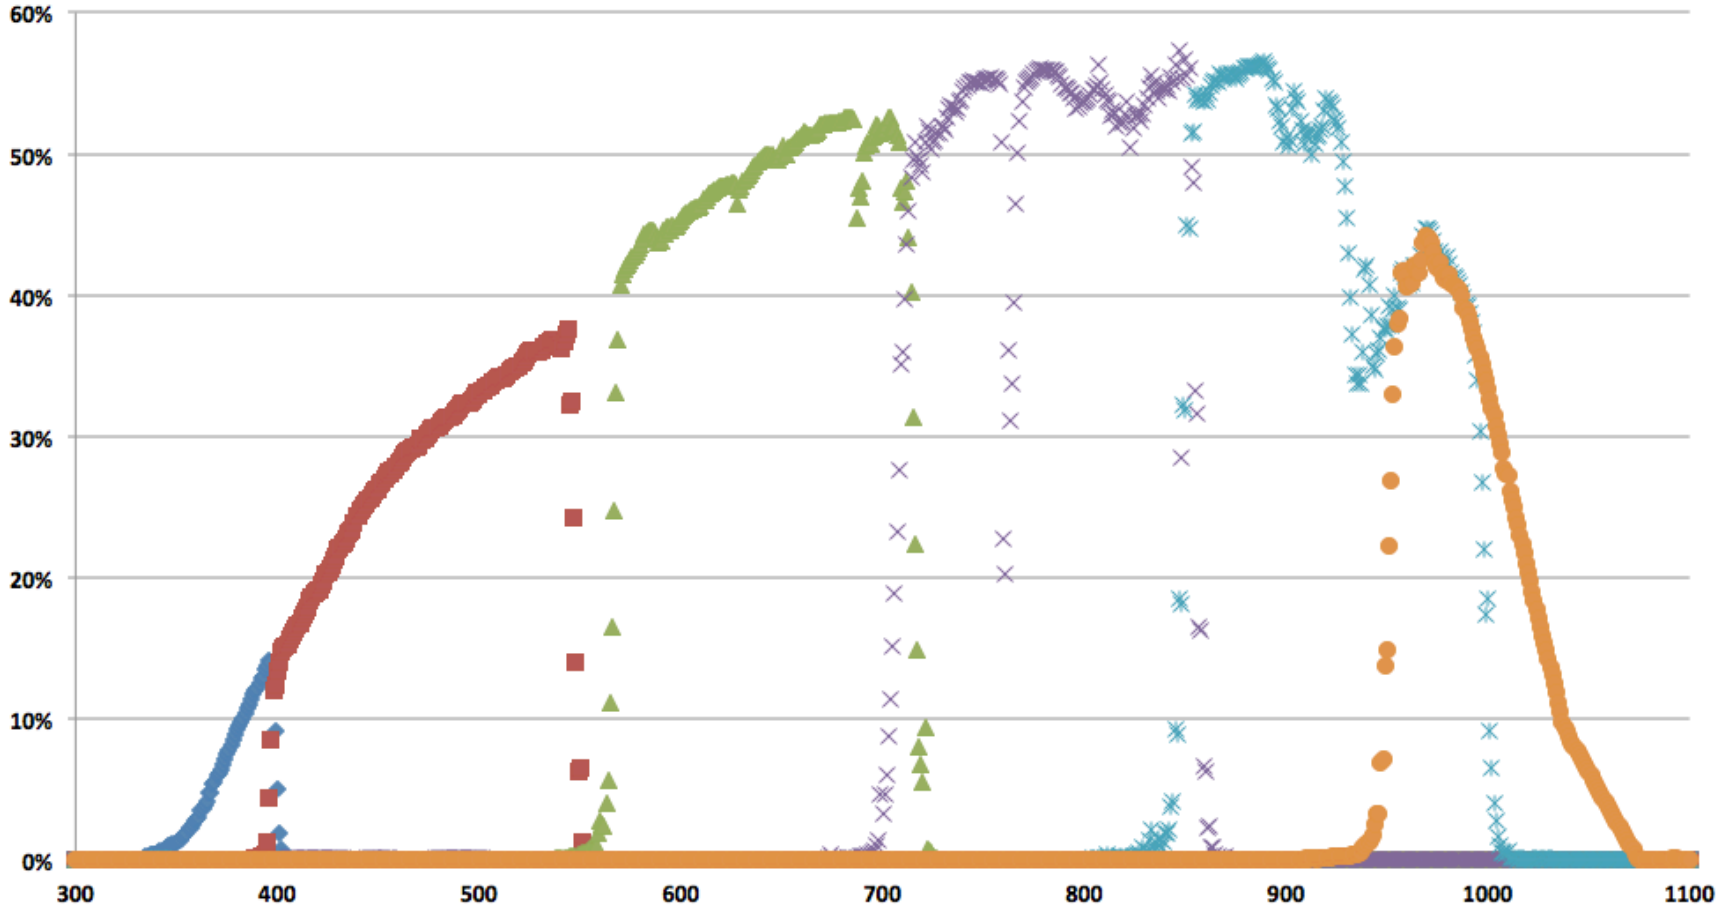


Atmosphere effects from MOTRAN models (aerosols and H₂O vapor). A new aTmCam is installed at CTIO and provides monitoring (+separate GPS based system)



DARK ENERGY
SURVEY

Transfer functions and absolute scale

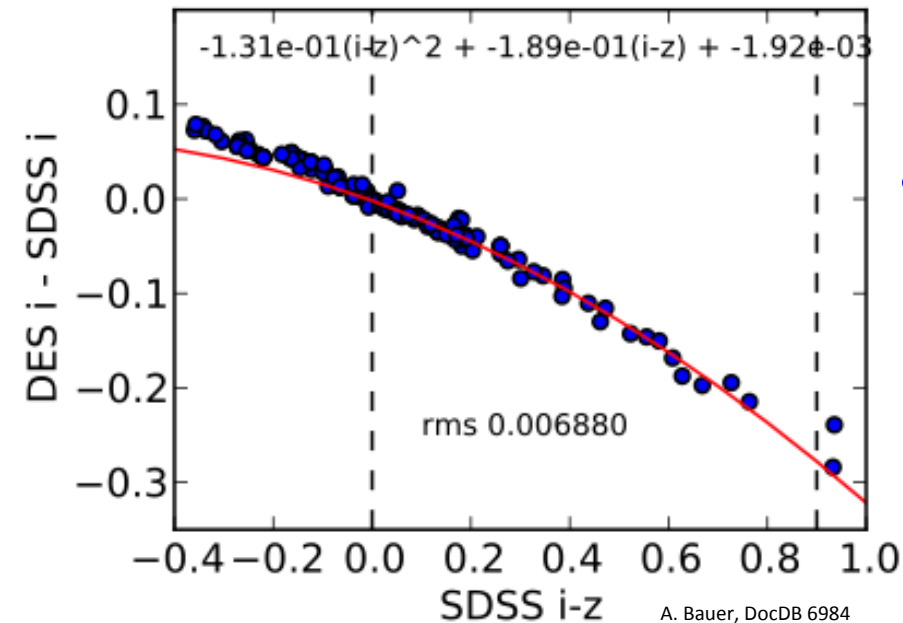


Initial setting of absolute scale done using stars from with known SEDs and magnitudes.

$$N_* = A t \int \frac{\lambda}{hc} f_\lambda S_\lambda d\lambda$$

Current program utilizes a set of calspec standards such as BD+17 and DA white dwarfs

Transfer functions derived from the system response maps to determine the DES to SDSS transformation in magnitudes and color for a catalog of stellar spectral types.

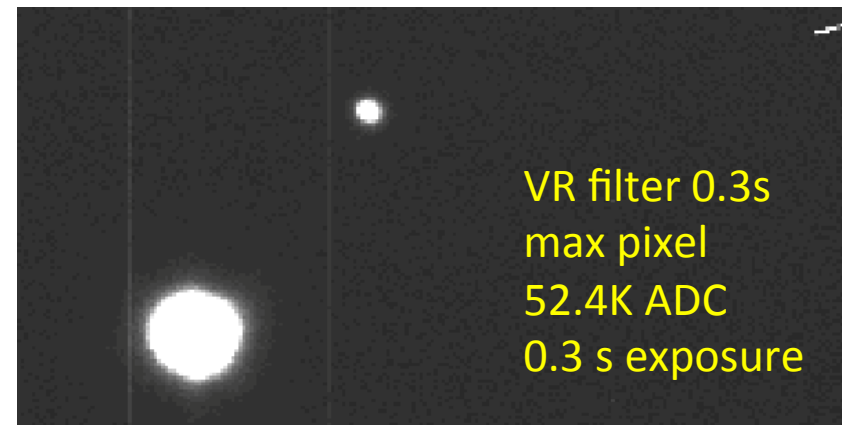



Conclusions

- DECal system functions to monitor and determine the system throughput as a function of wavelength and position on the focal plane
- Analysis of DECal data is performed on unprocessed raw images – need to monitor
- There are tricky effects to sort out such as illumination and pupil ghosts into a processing system that relies on biases, daily flats, and star flats → what's the “recipe”
- Despite these issues, DECam is on track towards demonstrating percent-scale photometric precision.